


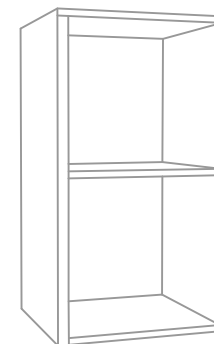

NICHO SUPERIOR GRETA REF. CZ 6962


MANUAL DE MONTAGEM INSTRUCCIONES DE ARMADO ASSEMBLE INSTRUCTIONS



FERRAGENS / HERRAJES


A		Cavilhas 6 x 30 Tacos Pegs
B		Cantoneira Acorrale Corner
C		Parafuso + Flange 4,5 x 50 Tomilo 4,5 x 50 Screw 4,5 x 50
D		Prego 10 x 10 Tapa 10 x 10 Nail 10 x 10
E		Bucha Casquillo Bushing
F		Parafuso 3,5 x 14 Tomilo 3,5 x 14 Screw 3,5 x 14
G		Parafuso + Flange 3,5 x 14 Tomilo 3,5 x 14 Screw 3,5 x 14
H		Parafuso 3,5 x 40 Tomilo 3,5 x 40 Screw 3,5 x 40
I		Parafuso União Tomillo de Unión Union Screw

①

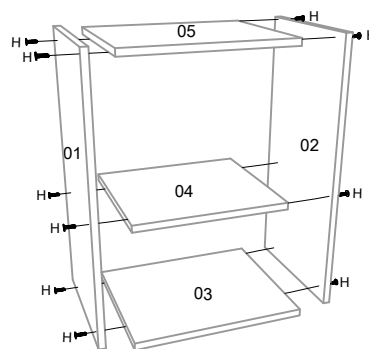


Fixar as laterais, prateleira, tampo e base utilizando os parafusos (H).

②

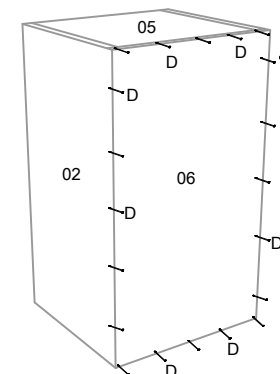

Fixar as costas do módulo utilizando os pregos (D).

③

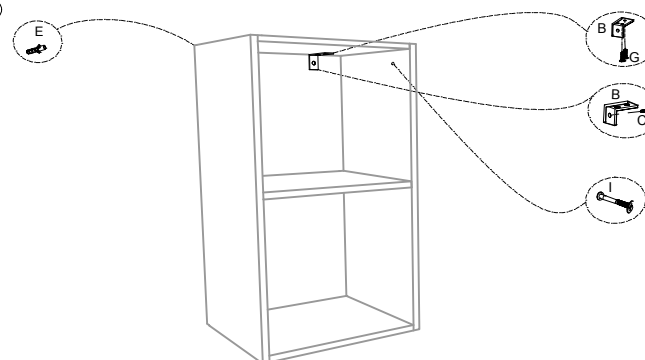

Fixar a cantoneira (B) no tampo do módulo utilizando os parafusos (G).

Fixar o módulo na parede utilizando os parafusos (C) e a bucha (E).

Unir os Módulos utilizando os parafusos (I).