

# MIA MODULAR TALL CABINET

SKU# WEMIA31362

LOT: AT-2528-5984




#### For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

#### WF Time to get started

Set up a clean and soft workplace to avoid damage during assembly. You can use the box and internal protections as a cover. It also helps to double-check if you have got all the pieces and parts before diving into the assembly.

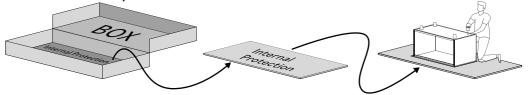

#### **Estimated time** for assembly





#### People recommended

for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.


#### **Tools Needed**


Grab a Phillips screwdriver to conquer this assembly.



#### Use power tools with caution

This furniture is made of Solid Wood and Composite Wood, soft materials. If you choose to use power tools, set it to the slower setting. Be careful! Power tools can cause cracking or damage to the furniture, they can also damage the hardware if misused.

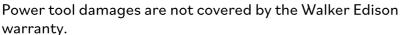

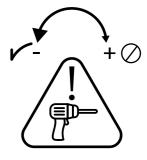



Scan to get assembly tips and help!

## WE Parts List

			_
Part Number	Description	Quantity	
01	Bottom Panel	1	-
02	Left Panel	1	
03	Top Panel	1	
04	Right Panel	1	
05	Shelf	1	
06	Back Panel	1	
07	Foot	5	
08	Door	2	WALKER EDISON  Collection Name Model: XXXXXXXFF LOT: AAYYWW-XXX
09	Glass Door Front	2	Distribution and responsible for the anti-tip hardware: Walker Edison Furniture Company 1553 W 9000 S, West Jordan,  Date: MM/20YY Rev. MM/20YY-VX CAMFER compiliant / conforme au CANFER
10	Top Rail	1	UT 84088 United States  For details on Assembly Videos. Assembly Instructions. Replacement Parts and Customer Service. SCAN HERE.  Gliffornia 31 200 compliant for Formaldehyde / Conforme all ture VI de la TSCA California 31 200 compliant for Formaldehyde.
11	Shelf Rail	1	Conforme a la norme Californie 951 zu pour le formaldehyde.
	09	05	06 04
	07	(07) - (07)	

## WE Hardware List

	Part	Size	Name	Quantity
Α		8x30mm	Wooden dowel	14
В		Ø7x30mm	Cam Bolt	11
С		Ø15x10mm	Cam Lock	11
D		Ø3.5x12mm	Screw	20
E		Ø3.5x25mm	Screw	4
F		Ø4x14mm	Screw	24
G		Ø4x20mm	Screw	5
Н		Ø5x40mm	Screw	5
I		Ø3x16mm	Screw	8
J		Ø 19mm	Sticker	19
К	(v)	14.7x30mm	Support	8
L		224mm	Handle	2
М		Ø35mm	Metal Hinge	4
N		25x12mm	Door Latch	20
0		1/4×5/8	Washer	02
Р		20x200mm	Wall Anchor	01
Q		6x18mm	Shelf Support	04


The hardware quantities listed above are required for proper assembly.


Extra hardware pieces may be included.


#### Step 1 Let's get started! Insert Wooden Dowels (A) into Bottom Panel (1), Left Panel (2), Right Panel (4), Top Rail (10) and Shelf Rail (11). Also, attach Cam Bolts (B) to Left Panel (2), Top Panel (3) Right Panel (4) $_{1}B$ and Shelf (5) using a Phillips screwdriver. 03 B (05)В **Wooden Dowels** Dowels are essential in furniture assembly to create strong, precise connections. They ensure structural integrity, prevent shifting, and simplify alignment, resulting in sturdier, longer-lasting furniture. Follow these steps: 1: Select the appropriate size 2: Insert into drilled hole and press Align dowel the dowel acording with step. firmly to ensure placement is set. with corresponding piece and press together until secure.



Attach Hinges (M) to Doors (8) using Screw (F) and a Phillips screwdriver.

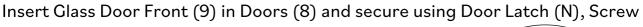

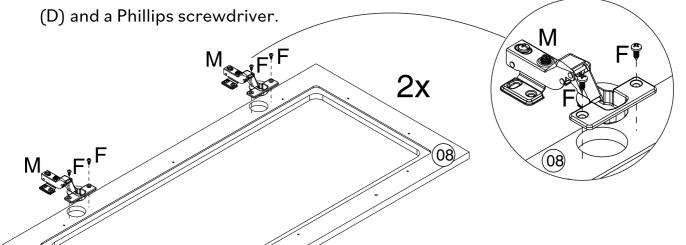


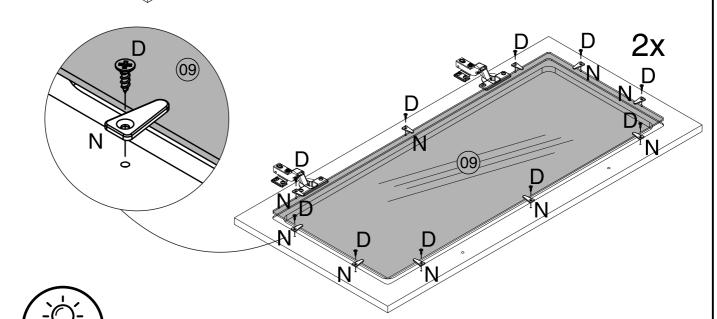

To keep your product looking its best and scratch-free, try assembling it on a soft surface like carpet or a blanket. This helps prevent any accidental scratches and keeps your furniture in top shape!




Join Bottom Panel (1) and Left Panel (2) using Cam Locks (C) and a Phillips screwdriver.

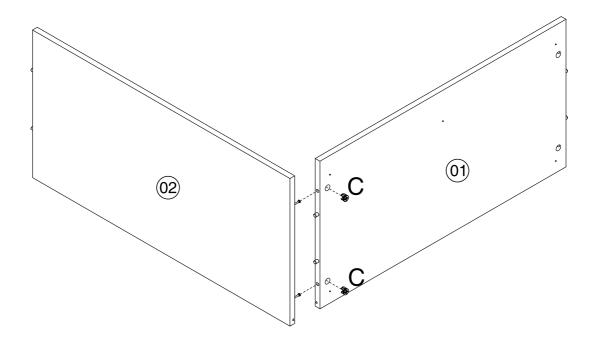




#### Cam Locks

Cam Locks help to securely join two pieces together. Follow these easy steps.

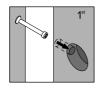

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

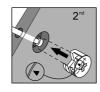


2: Assemble both parts together. The cam bolts go in the drill holes that have a circular hole on the side, you should be able to see the cam bolts through it. After fitting parts together insert the cam lock on the side holes.



3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with





Secure Top Rail (10) and Right Panel (4) using dowels, Cam Locks (C) and a Phillips screwdriver.

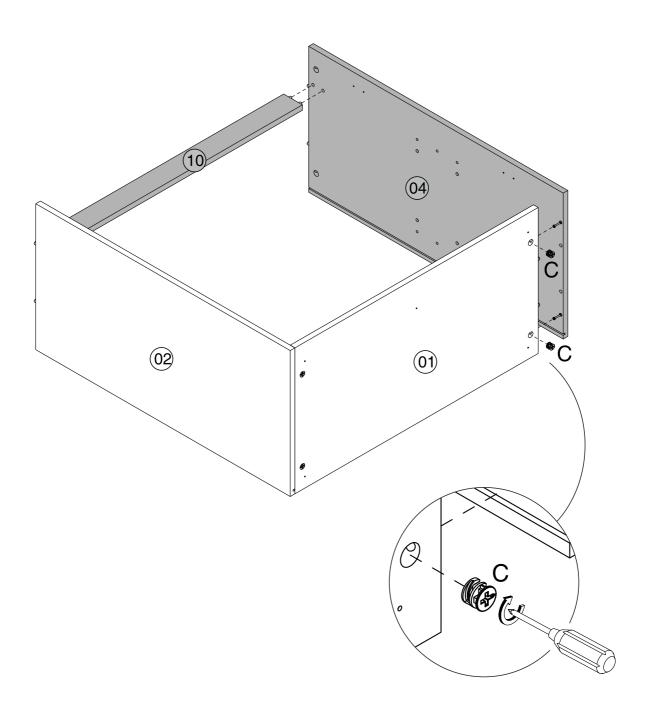




Slide Back Panel (6) between the grooves on Left Panel (2) and Right Panel (4) fitting in Bottom Panel (1).

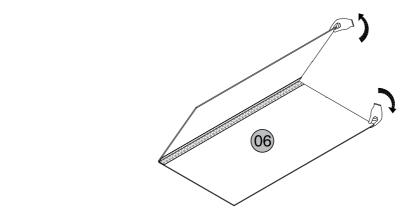

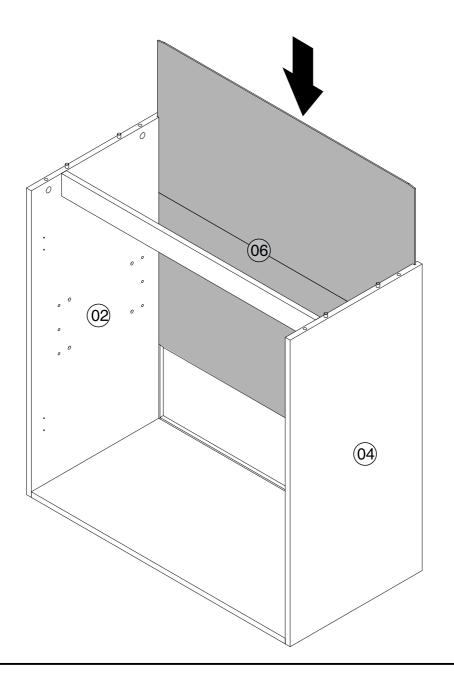




Attach Top Panel (3) to Left Panel (2) and Right Panel (4) using Cam Locks (C) and a Phillips screwdriver.

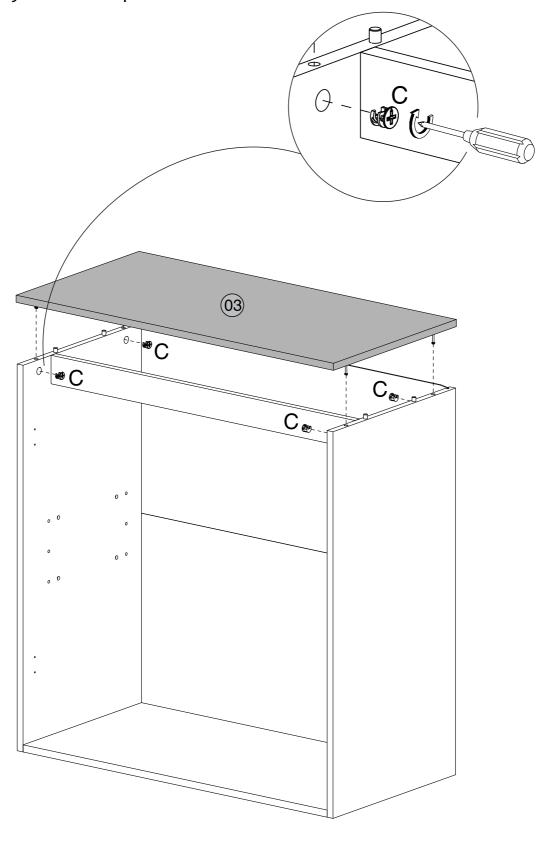




Secure Shelf Rail (11) to Shelf (5) using Cam Locks (C) and a Phillips screwdriver.

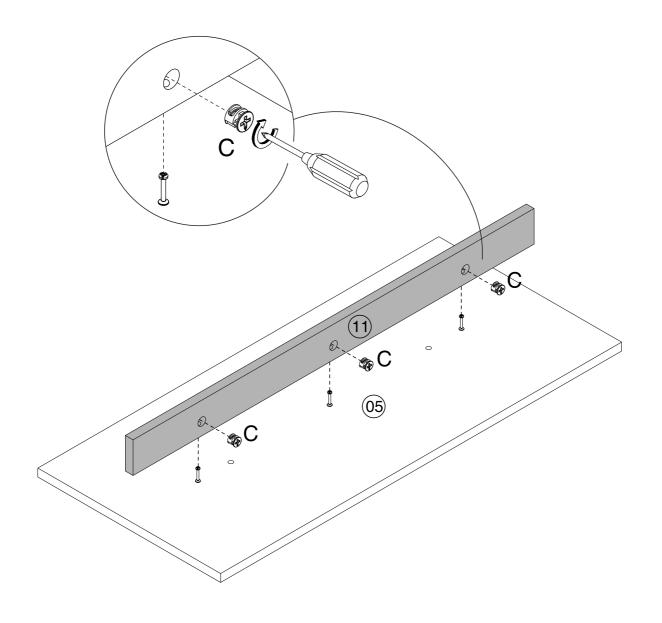


Step 8 Insert Shelf Support (Q) on the holes in the middle of Side Panels. Then, place Shelf (5). Q Q° 05) 11) 05)




Attach Door (8) on Left Panel (2) using Screws (F) and a Phillips screwdriver.

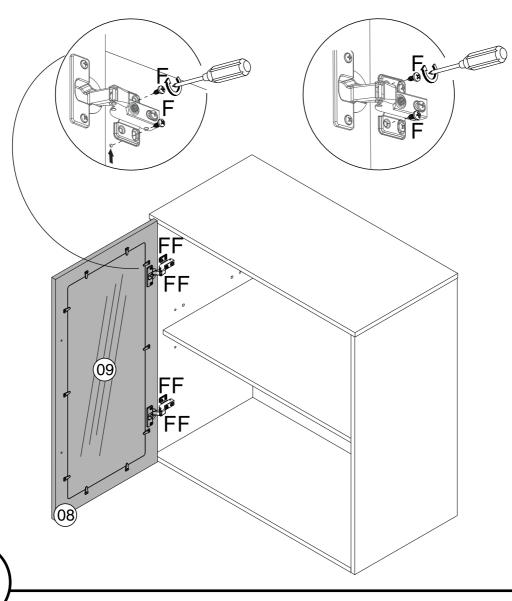

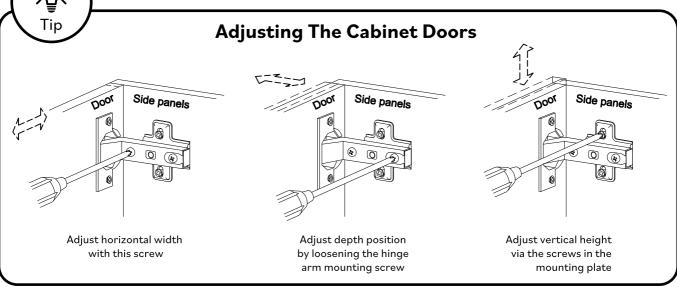





Secure Handle (L) using Screw (E) and a Phillips screwdriver.

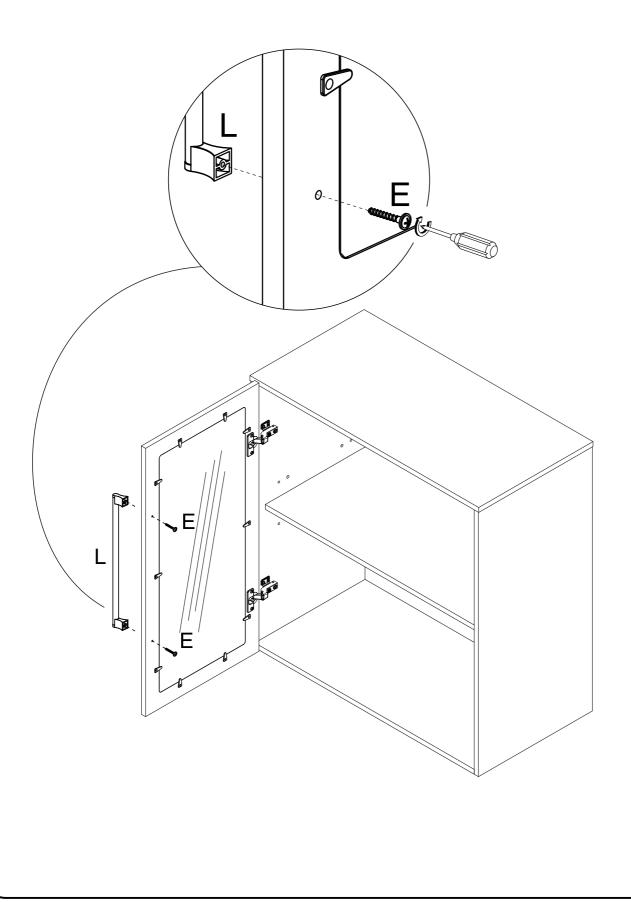




Attach Door (9) on Right Panel (4) using Screws (F) and a Phillips screwdriver.

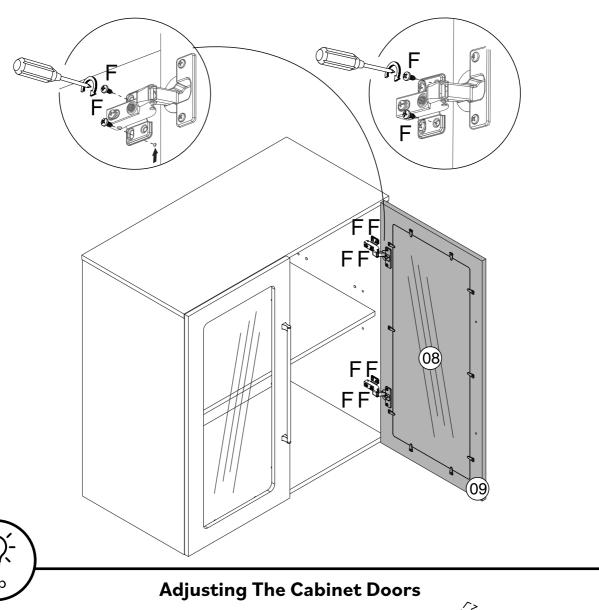


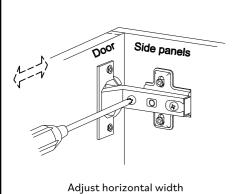

with this screw

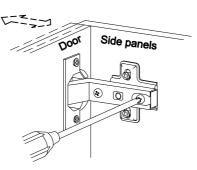


Adjust depth position by loosening the hinge arm mounting screw

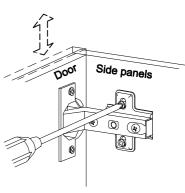


Adjust vertical height via the screws in the mounting plate


Secure Handle (L) using Screw (E) and a Phillips screwdriver.

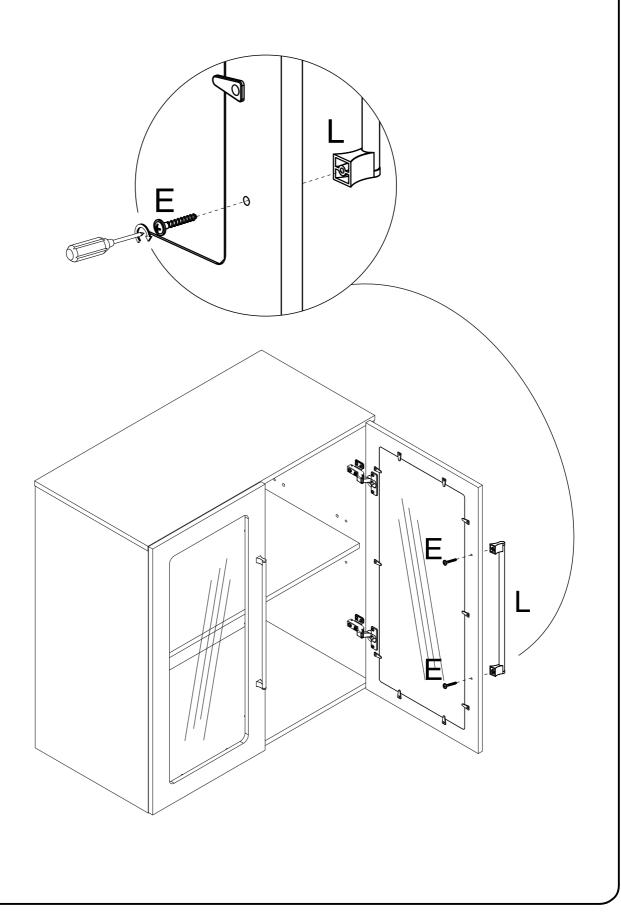

Secure Back Panel (6) using Support (K), Screw (I) and a Phillips screwdriver.

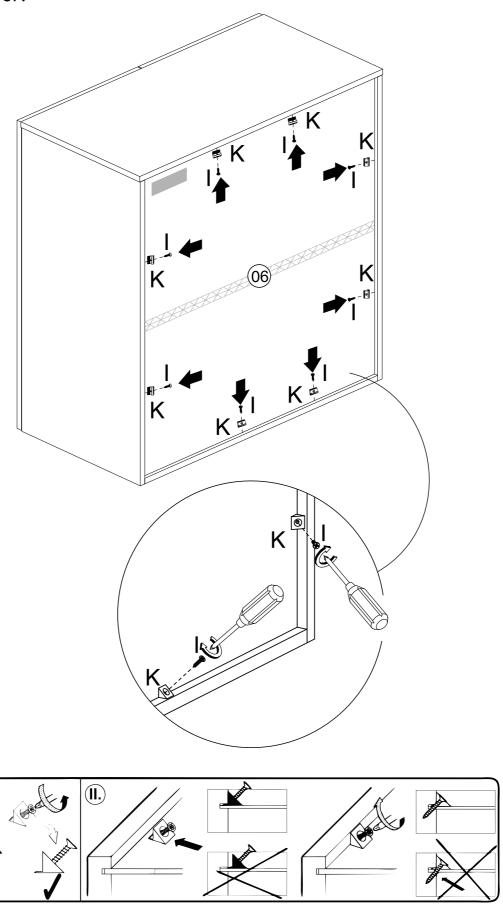


If you are not using your new cabinet on top of another Modular Mia Cabinet, you can attach Feet (7) using Screw (H) and a Phillips screwdriver.

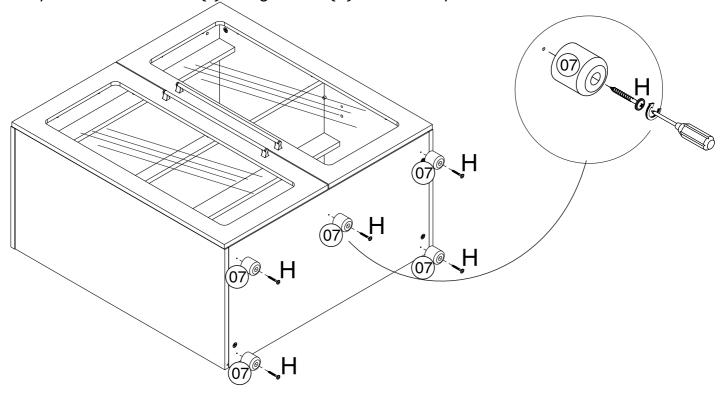


#### **Modular Assembly Options**

Step 15

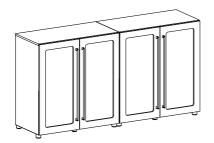



Step 16

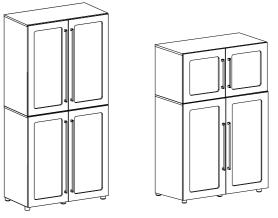



Attach your cabinets side by side using Screws (G) and a Phillips screwdriver. The

holes as pre drilled.

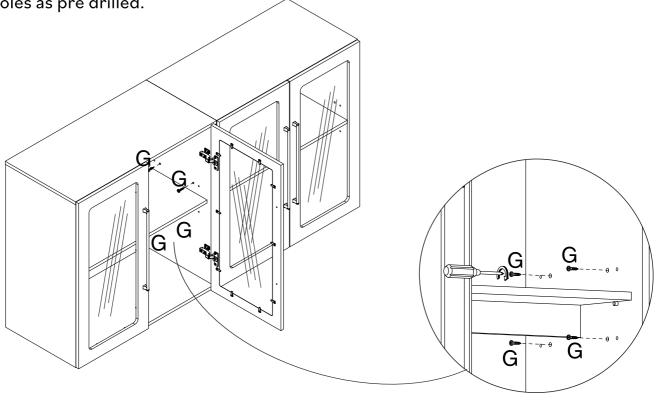


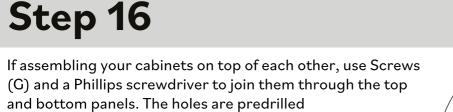

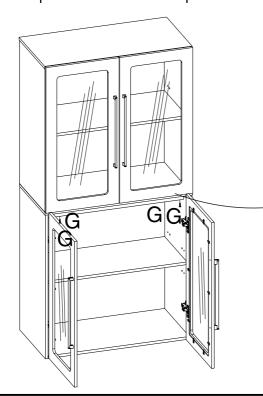


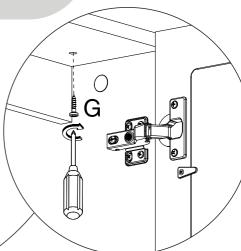


**Assembly Option** 

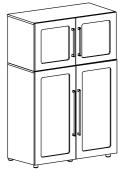


With everything in place use Stickers (J) to cover the extra holes.

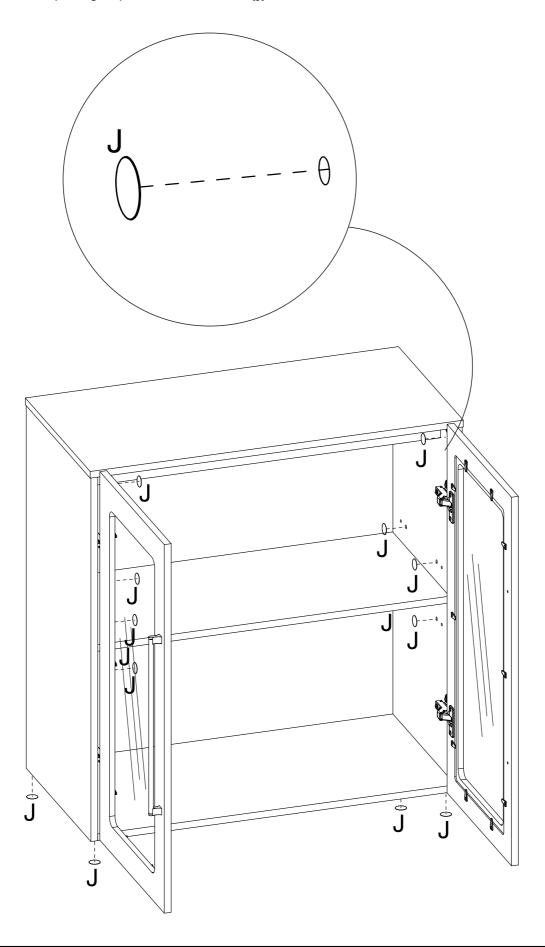

Attach your Cabinet to the wall. Secure Wall Anchor (P) to your cabinet using Washer (O), Screw (G) and a Phillips screwdriver.

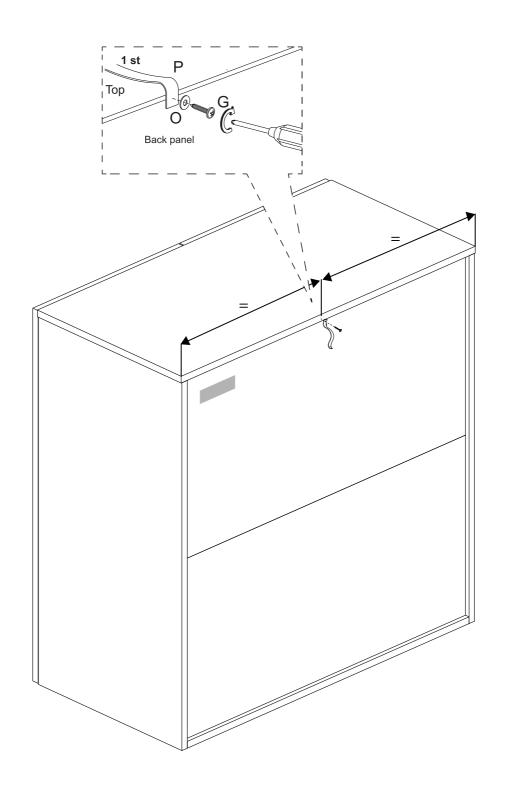


To finish this up use a plastic bush suitable for your wall. Then, secure the Wall anchor (P) to the wall using Washer (O) and a screw also suitable for your wall.

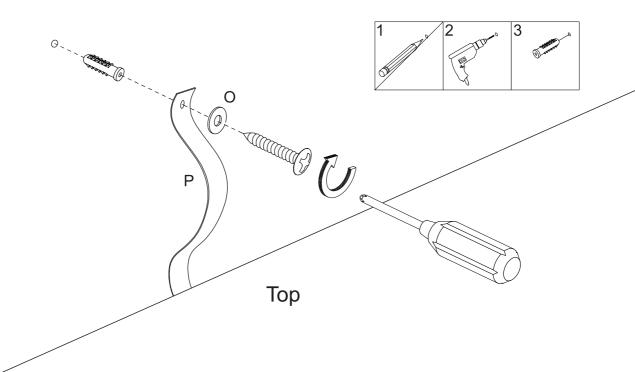

#### Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

## You did it! Enjoy your new Modular Cabinet!

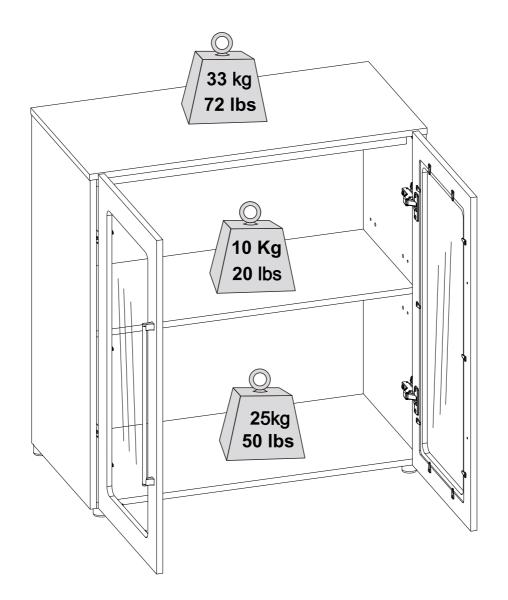

#### Congratulations on your new piece of furniture!

We would love to hear about it and see it.

Please leave us a review or post a picture with

#mywalkeredisonhome

## Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008** 

Email us at service@walkeredison.com

Visit our Customer Service website at

walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

#### **SCAN HERE**





For cleaning, never use abrasives, use a soft cloth and water with neutral soap to clean the furniture.