

TM-1205

Instruções de Montagem Assembly Instructions Instrucciones de Montaje

Acesse Vídeos de Montagens
Access Mounting Videos
Acceder a los Vídeos de Montaje
www.tecnomobili.ind.br

tecnomobili

Estrada RSC 453, Km s/n° | Garibaldi | RS
CEP: 95720-000 | Fone / Fax: 54.3464.2050
sac@moveisvideira.com.br

Notas Especiais:

- 01** - Examine completamente todas as peças do móvel antes de começar o trabalho.
02 - Recomenda-se montar o móvel conforme este Manual de Montagem.
03 - É de responsabilidade do montador seguir as instruções do Manual de Montagem, que são fundamentais para garantir a estrutura do móvel.
04 - Para limpeza, utilizar somente pano úmido e sabão neutro.

Special notes:

- 01** - Check all parts of the unit thoroughly before starting work.
02 - It is recommended to assemble the furniture according to this Installation Manual.
03 - It is the responsibility of the assembler to follow the instructions in the Assembly Manual, which are essential to ensure the structure of the furniture.
04 - For cleaning use only damp cloth and neutral soap.

Notas especiales:

- 01** - Examine completamente todas las piezas del mueble antes de iniciar el trabajo.
02 - Se recomienda montar el mueble conforme el Manual de Ensamblaje.
03 - Es de responsabilidad del montador seguir las instrucciones del Manual de Ensamblaje, que son fundamentales para garantizar la estructura del mueble.
04 - Para limpieza solamente usar trapo húmedo y jabón neutro.

Guarante certificate:

The guarantee of products manufactured by Móveis Videira LTDA covers any defects / manufacturing defects, within the period established by the Consumer Protection Code, in its Article 26, II, which provides for a legal guarantee of ninety (90) days.




Lista de Peças / List of pieces / Lista de piezas


Cód	DESCRIÇÃO	DESCRIPTION	DESCRIPCION	QTD	RAW MATERIAL	DIMENSION	CÓD
01	Base	Base	Base	1	MDP 15mm	490x200x15mm	101130
02	Lateral Esquerda	Left Side	Lateral Izquierda	1	MDP 15mm	665x490x15mm	311205
03	Lateral Direita	Right Side	Lateral Derecha	1	MDP 15mm	665x490x15mm	301205
04	Travessa	Rail	Traviesa	1	MDP 15mm	169x55x15mm	621205
05	Travessa Frontal	Front Rail	Traviesa Frontal	1	MDP 15mm	169x92x15mm	601205
06	Travessa Traseira	Rear crossbar	Traviesa Traseira	1	MDP 15mm	169x65x15mm	611205
07	Costa	Back	Costa	1	MDP 03mm	675x190x03mm	401205

ATENÇÃO


Se necessário, utilizar parafuso A para junção de tampo

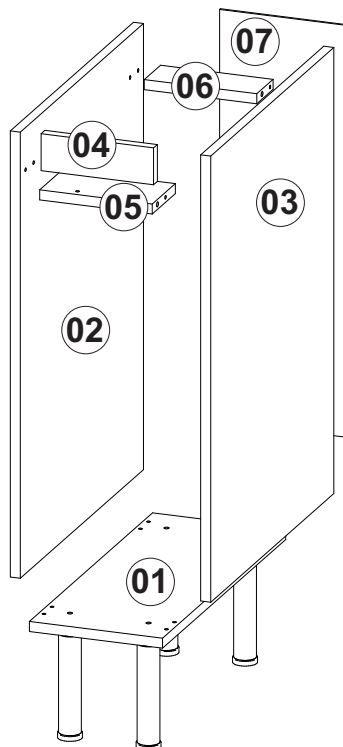

Ferramentas | Tools | Herramientas

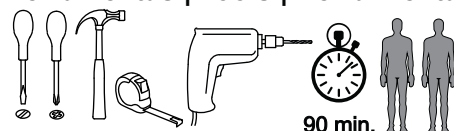

Revisão: 01
Data: 21/10/2024

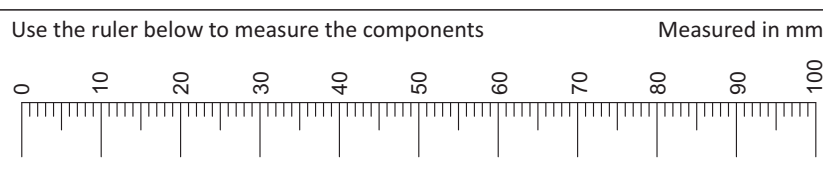

TAMANHO REAL - TAMAÑO VERDADERO - REAL SIZE

REF	DESCRIÇÃO	QTD	CÓD
A	3,5x14mm CC	17	3639
B	3,5x40mm CC	06	8115
C	Cavilha 5 x 30mm	08	3880
D	5,0x40mm CC	04	4000
E	5x45mm CF	02	2605

ILUSTRAÇÃO - ILUSTRACION - ILLUSTRATION

REF	DESCRIÇÃO	QTD	CÓD
F	22x3mm Prego 10x10	16	3051
G	43x43x25mm Cantoneira com Capa	02	5630
H	34x7mm Parafuso minifix	04	3771
I	15x12mm Tambor minifix	04	9516
J	40x8mm Bucha 8mm	02	5623
K	3,5x25mm CC	02	0286
L	12 x 12 x 12mm Cantoneira 2 Furos	04	3615
M	Adesivo Tapa Furo	08	
N	Pé Plástico 170mm Com Detalhe Cromado	04	
O	Toalheiro Simples	01	

