


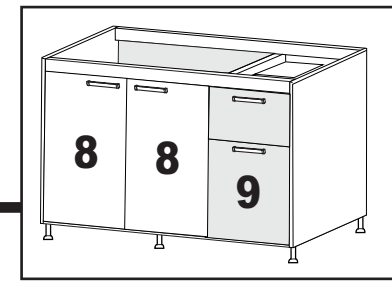














MANUAL DE MONTAGEM




INSTRUCCIONES DE ARMADO

ASSEMBLE INSTRUCTIONS



FERRAGENS / HERRAJES / IRONWORKS


A		Parafuso 3,5 x 12 tornillo 3,5 x 12 Screw 3,5 x 12
B		Puxador Tirador Handle
C		Parafuso 3,0 x 20 tornillo 3,0 x 20 Screw 3,0 x 20
D		Prego 10 x 10 Taxa 10 x 10 Nail 10 x 10
E		Cantoneira Cantoneira Cantoneira
F		Parafuso 3,5 x 30 tornillo 3,5 x 30 Screw 3,5 x 30
G		Cavilhas 6 x 30 Tacos Pegs
H		Corrediça Metálica Corrediza Metalic Slider
I		Parafuso 3,5 x 40 tornillo 3,5 x 40 Screw 3,5 x 40
J		Dobradiça Bisagra Hinge
K		Prego 13 x 15 Taxa 13 x 15 Nail 13 x 15
L		Pé Pie Shoe
M		Perfil H 779mm Profile H 779mm Perfil H 779mm
N		Calço p/ dobradiça Calzo w / bisagra Shim w / hinge
O		Suporte Apoyo Support

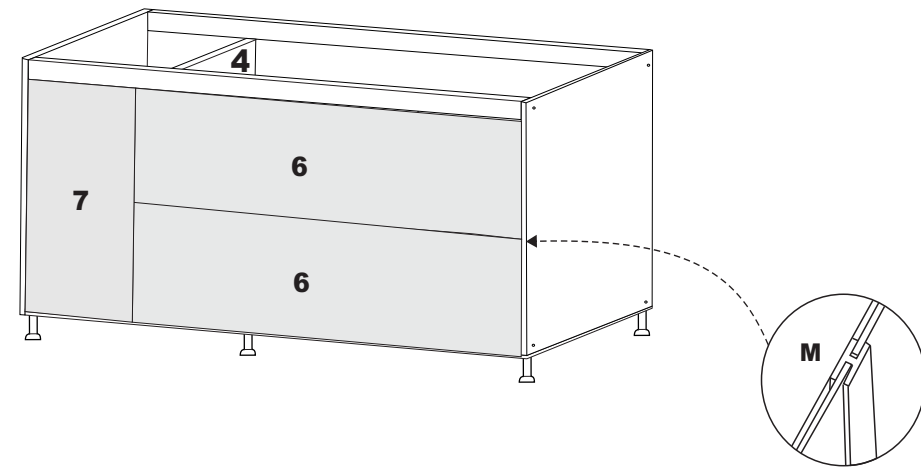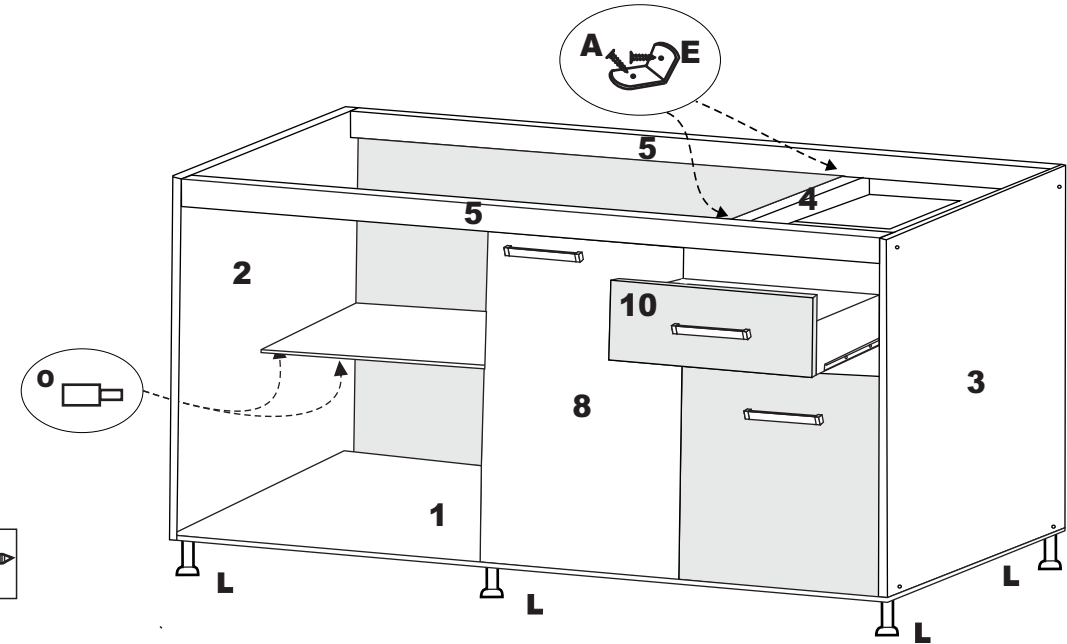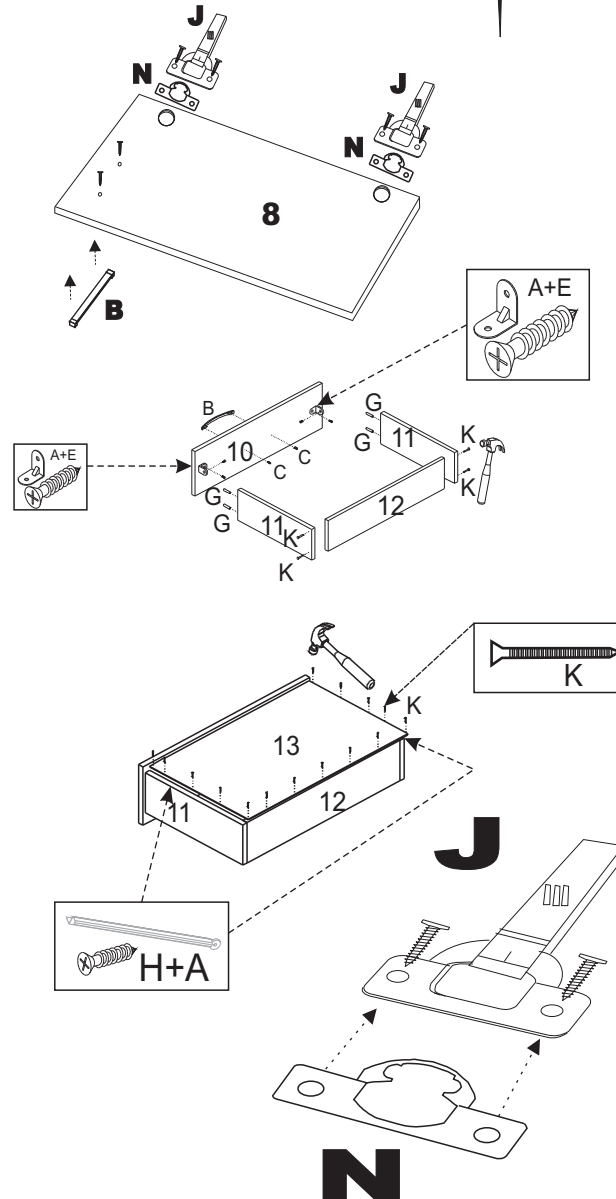







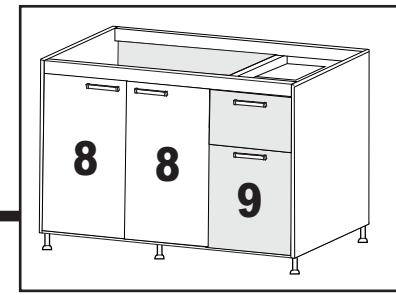







MANUAL DE MONTAGEM

INSTRUCCIONES DE ARMADO

ASSEMBLY INSTRUCTIONS



FERRAGENS / HERRAJES / IRONWORKS

A		Parafuso 3,5 x 12 tornillo 3,5 x 12 Screw 3,5 x 12
B		Puxador Tirador Handle
C		Parafuso 3,0 x 20 tornillo 3,0 x 20 Screw 3,0 x 20
D		Prego 10 x 10 Taxa 10 x 10 Nail 10 x 10
E		Cantoneira Cantoneira Cantoneira
F		Parafuso 3,5 x 30 tornillo 3,5 x 30 Screw 3,5 x 30
G		Cavilhas 6 x 30 Tacos Pegs
H		Corrediça Metálica Corrediza Metalic Slider
I		Parafuso 3,5 x 40 tornillo 3,5 x 40 Screw 3,5 x 40
J		Dobradiça Bisagra Hinge
K		Prego 13 x 15 Taxa 13 x 15 Nail 13 x 15
L		Pé Pie Shoe
M		Perfil H 779mm Profile H 779mm Perfil H 779mm
N		Calço p/ dobradiça Calzo w / bisagra Shim w / hinge

