


CÔMODA

REF.: CM 7051 RUBI

MANUAL DE MONTAGEM

INSTRUCCIONES DE ARMADO

ASSEMBLE INSTRUCTIONS

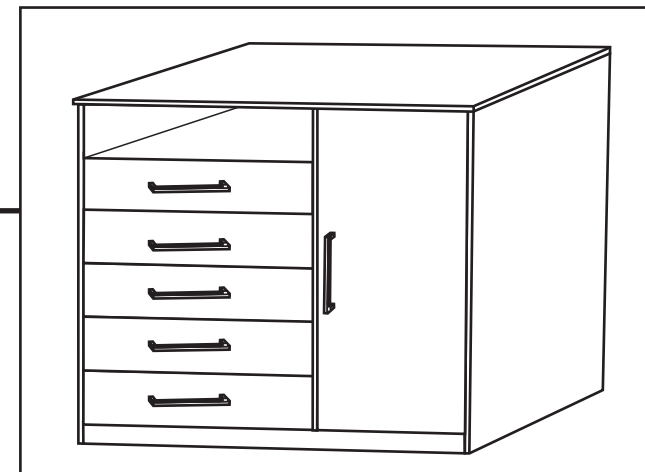

FERRAGENS / HERRAJES / IRONWORKS

A		Cavilhas 6 x 30 Tacos Pegs
B		Puxador Tirador Handle
C		Parafuso 3,5 x 40 Tornillo 3,5 x 40 Screw 3,5 x 40
D		Prego 10 x 10 Taxa 10 x 10 Nail 10 x 10
E		Cantoneira Acorrale Corner
F		Parafuso 3,5 x 12 Tornillo 3,5 x 12 Screw 3,5 x 12
G		Parafuso 3,5 x 30 Tornillo 3,5 x 30 Screw 3,5 x 30
H		Parafuso 3,5 x 40 Tornillo 3,5 x 40 Screw 3,5 x 40
I		Corrediça Metalica Corrediza Slider
J		Suporte Apoyo Support
K		Cola Cola Glues
L		Sapata Zapato Shoe
M		Dobradiça Bisagra Hinge
N		Parafuso 3,0 x 20 Tornillo 3,0 x 20 Screw 3,0 x 20
O		Prego 13 x 18 Taxa 13 x 18 Nail 13 x 18

