


# MANUAL DE MONTAGEM INSTRUCCIONES DE ARMADO ASSEMBLE INSTRUCTIONS

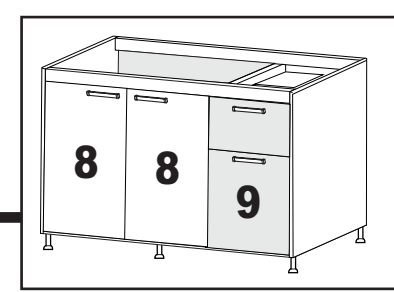

## FERRAGENS / HERRAJES / IRONWORKS

|   |                                                                                     |                                                           |
|---|-------------------------------------------------------------------------------------|-----------------------------------------------------------|
| A |    | Parafuso 3,5 x 12<br>tornillo 3,5 x 12<br>Screw 3,5 x 12  |
| B |    | Puxador<br>Tirador<br>Handle                              |
| C |    | Parafuso 3,0 x 20<br>tornillo 3,0 x 20<br>Screw 3,0 x 20  |
| D |    | Prego 10 x 10<br>Taxa 10 x 10<br>Nail 10 x 10             |
| E |    | Cantoneira<br>Cantoneira<br>Cantoneira                    |
| F |    | Parafuso 3,5 x 30<br>tornillo 3,5 x 30<br>Screw 3,5 x 30  |
| G |    | Cavilhas 6 x 30<br>Tacos<br>Pegs                          |
| H |    | Corrediza Metálica<br>Corrediza<br>Metalic Slider         |
| I |    | Parafuso 3,5 x 40<br>tornillo 3,5 x 40<br>Screw 3,5 x 40  |
| J |  | Dobradiça<br>Bisagra<br>Hinge                             |
| K |  | Prego 13 x 15<br>Taxa 13 x 15<br>Nail 13 x 15             |
| L |  | Pé<br>Pie<br>Shoe                                         |
| M |  | Perfil H 779mm<br>Profile H 779mm<br>Perfil H 779mm       |
| N |  | Calço p/ dobradiça<br>Calzo w / bisagra<br>Shim w / hinge |
| O |  | Suporte<br>Apoyo<br>Support                               |

