


GUARDA ROUPA

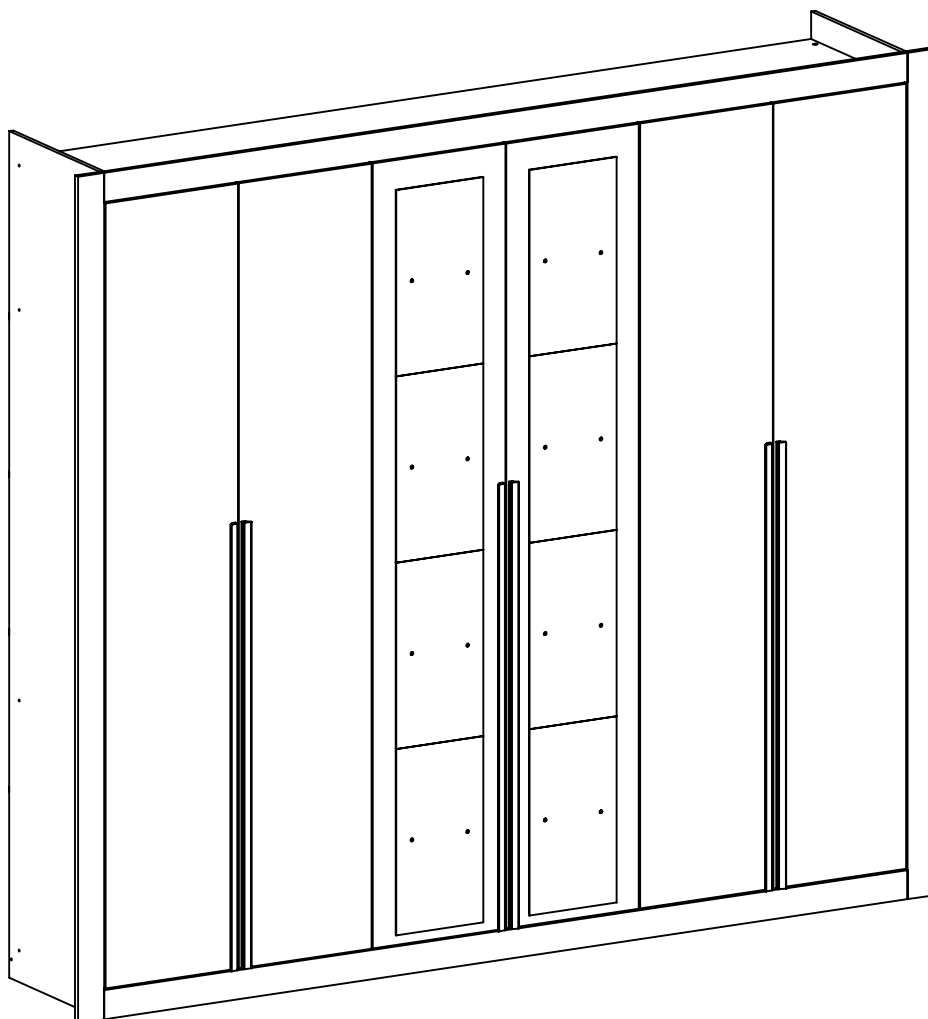

Informações Úteis

É recomendada a prévia leitura de toda a instrução de montagem e conferência das peças e componentes antes de iniciar a montagem do produto.



A montagem do produto deverá ser feita em superfície limpa e plana. Aconselhamos utilizar a embalagem do produto para forrar o chão a fim de não danificar o produto.

Durante a montagem evite batidas e contato com objetos cortantes. Observar as cargas máximas suportado pelo produto.


Limpeza

Retire o pó com uma flanela seca e depois utilize um pano macio umedecido com água.

Não utilizar produtos químicos e abrasivos

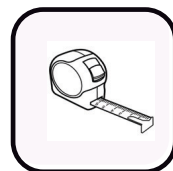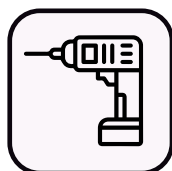


Nº DA PEÇA	DESCRIÇÃO	QTD	CÓD. BRANCO	CÓD. CINAMOMO OFF WHITE
1	CHAPÉU 2292X450X12	1	33227	33227
2	CHAPÉU 2292X450X12 SUPERIOR	1	33228	33228
3	CHAPÉU 2292X450X12 2-LADOS	1	33229	33229
4	CHAPÉU 372X385X12	1	33230	33230
5	CHAPÉU 756X450X12	2	33231	33231
6	COSTA 2312X405X3	5	33232	33232
7	DIVISÃO 1638X385X12	1	33233	33233
8	DIVISÃO 1638X450X12 DIR	1	33234	33234
9	DIVISÃO 1638X450X12 ESQ	1	33235	33235
10	ENCABEÇAMENTO 2308X75X15	2	33236	33237
11	FRENTE GAVETA 701X130X12	6	33238	33238
12	FRONTAL 2180X75X15	2	33239	33240
13	FUNDO DE GAVETA 679X363X3	6	33241	33241
14	LATERAL 2180X450X12 DIR	1	33242	33243
15	LATERAL 2180X450X12 ESQ	1	33244	33245
16	LATERAL DE GAVETA 360X90X12	12	28405	28405
17	PILASTRA 360X90X12	2	29377	29377
18	PORTA 2022X381X15 DIREITA	3	33246	33247
19	PORTA 2022X381X15 ESQUERDA	3	33248	33249
20	PRATELEIRA 372X385X12	6	33250	33250
21	RODAPÉ TRASEIRO 2292X75X15	2	33251	33251
22	TRASEIRO DE GAVETA 657X90X12	6	33252	33252
23	TRAVESSA 417X75X15	2	33253	33253

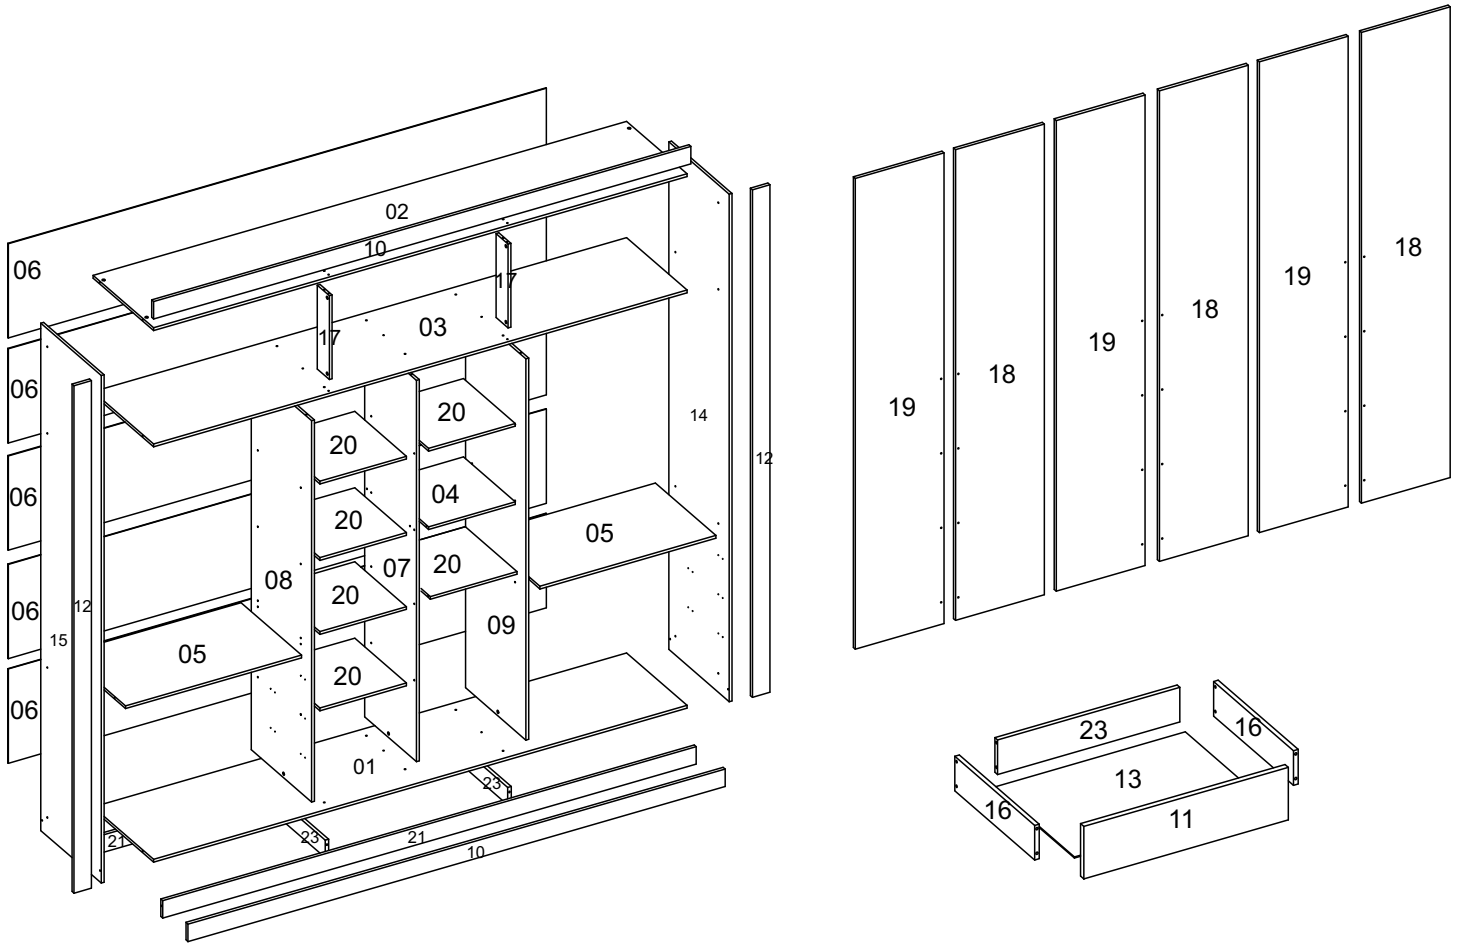

Lista de Ferragens


Parafuso 4,0x40 - Cod.3983

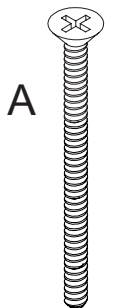

A

x38

3,5x25- cod 3870



B

x29

Parafuso 3,5x12 Cód.3385



C

x320

Porca plástica Cód.3991



D

x38


Cavilha 6x30 Cód.3881



E

x68

Suporte Prat Cod.8740



F

x24

Prego 10x10 Cód.3875



G

x190


PUX 1150MM



H

x6

Cod 11924

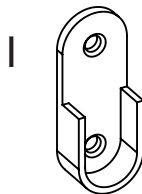

I

x6

6x50-Cod 8686



J

x2


Sapata Cód.6990



K

x8


Cantoneira dupla Cód.11409



L

x06


Cantoneira Trapézio Cód.35188

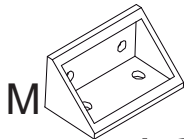

M

x12


CABIDEIROS



O

x3

2232mm

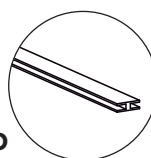

P

x4


Cola Cód.3872



Q

x2


3,5x20-cod 7035



R

x8


Cod 3384

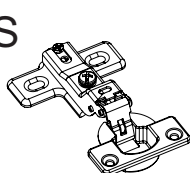

S

x24


12x12-Cod 3876



T

x18


Cod 3882



U

x12


Cod 28997



V

x24

300MM-Cod 16453

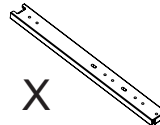

X

x6


6x20-Cod 26366




Y

x4


3

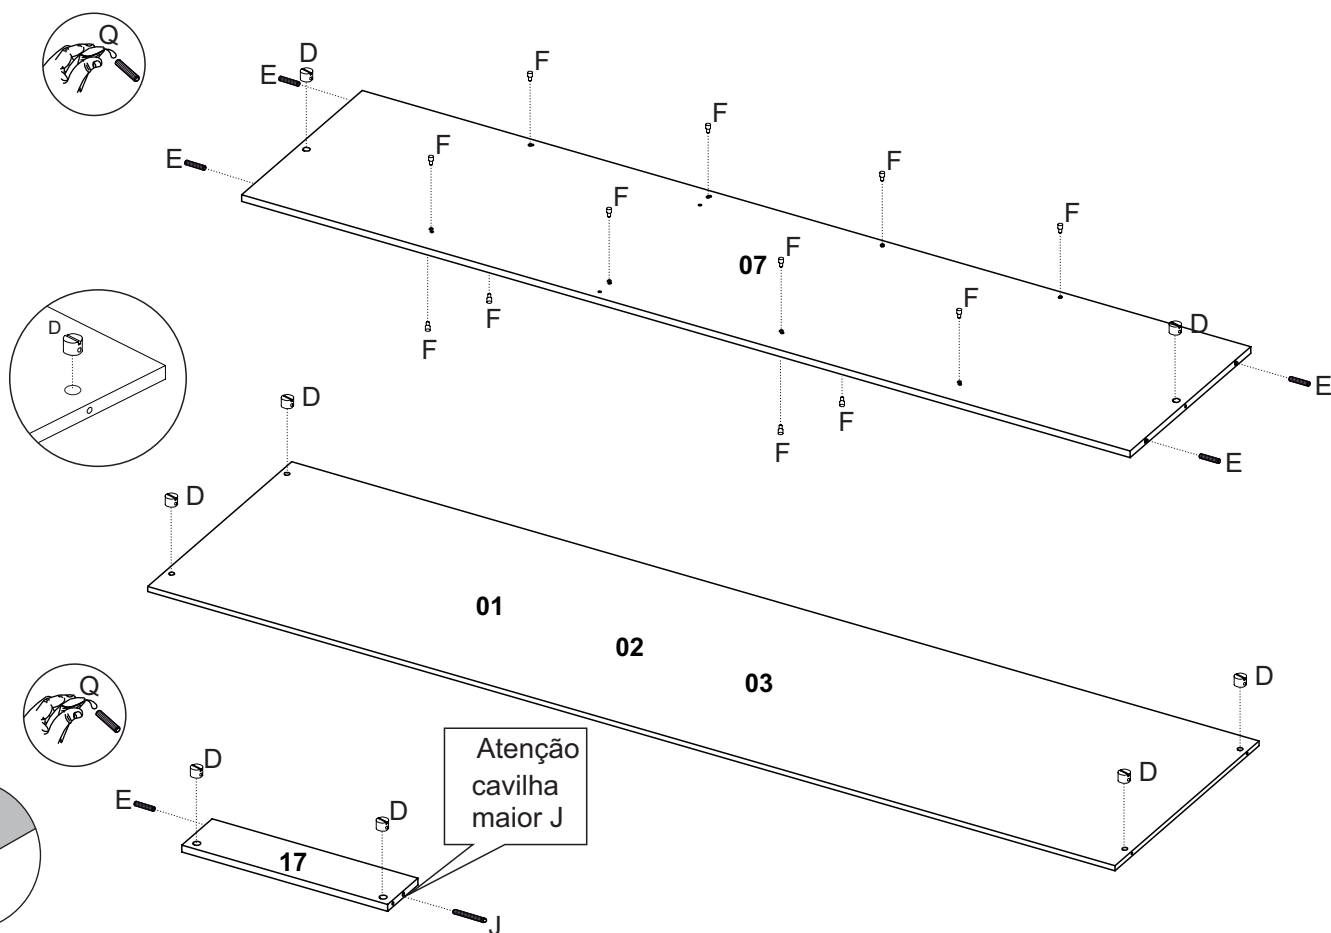


4

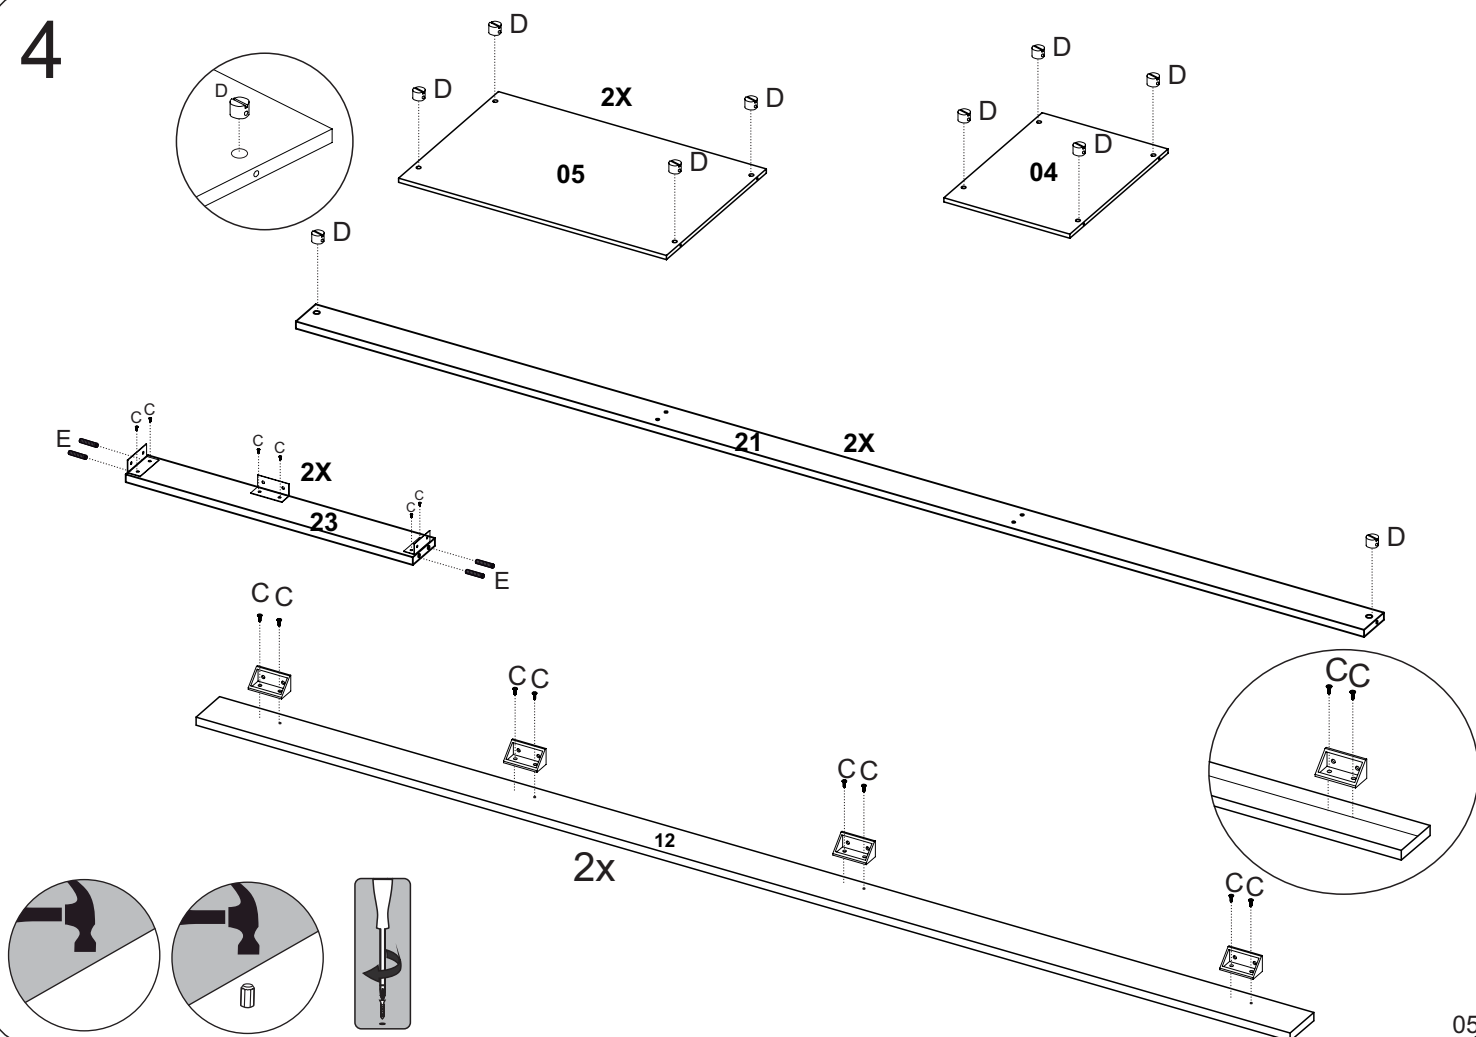



5

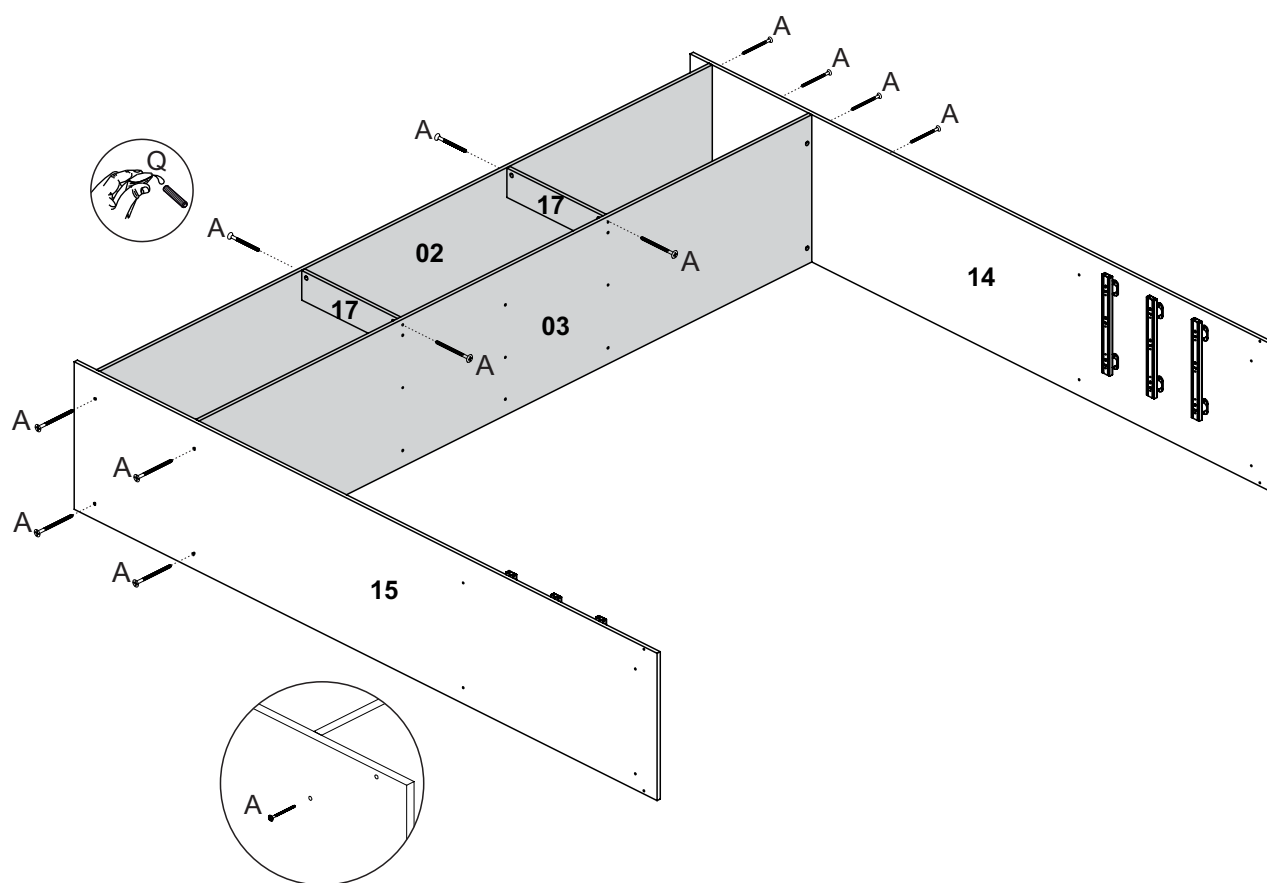




6

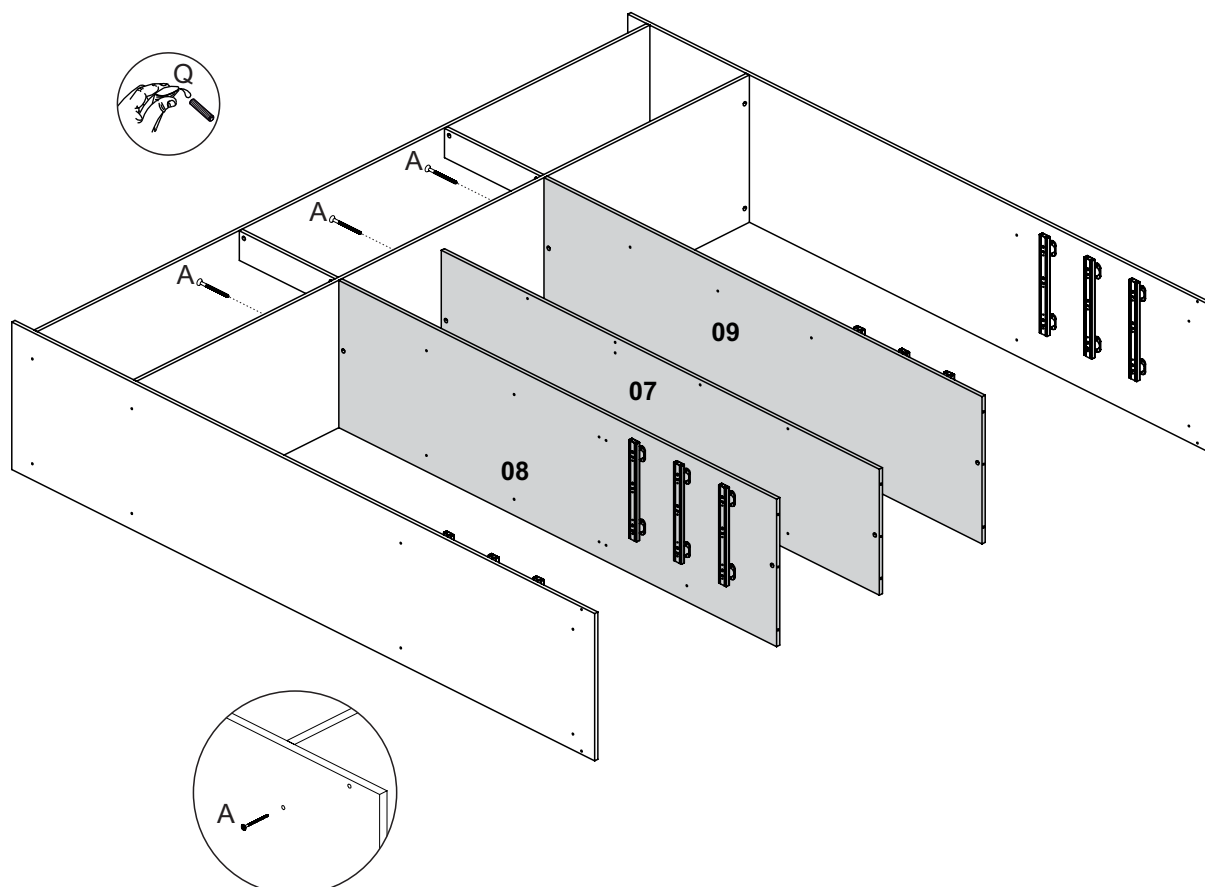

7

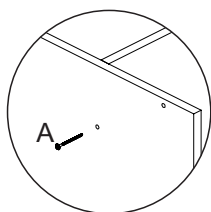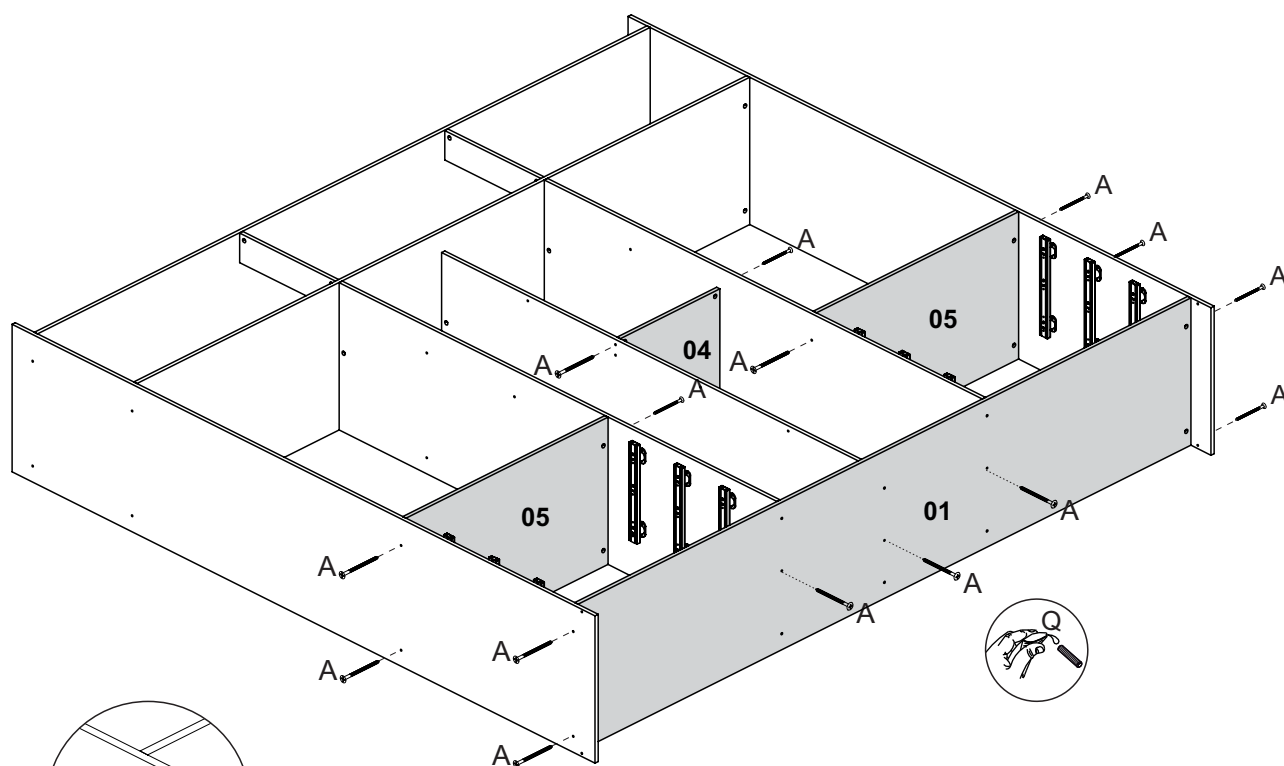


8

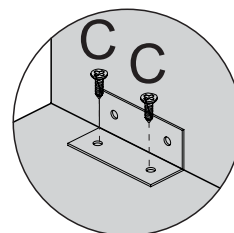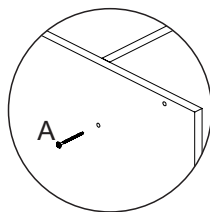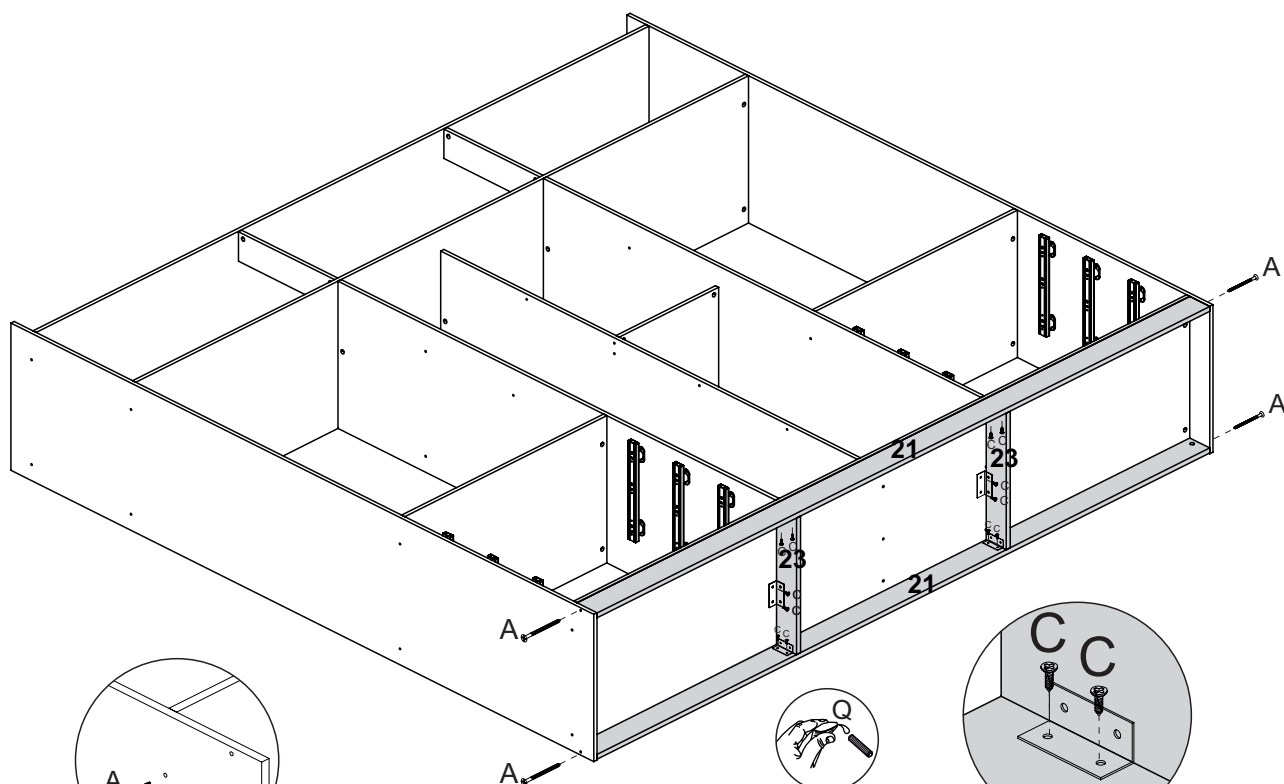


10

Diagram illustrating the assembly of the top frame (10) and the installation of the top rail (12). The diagram shows the frame structure with internal dividers. Callouts indicate the installation of corner brackets (M) and side brackets (R, Y) using screws (C). A callout for a screw (B) is also shown.




11

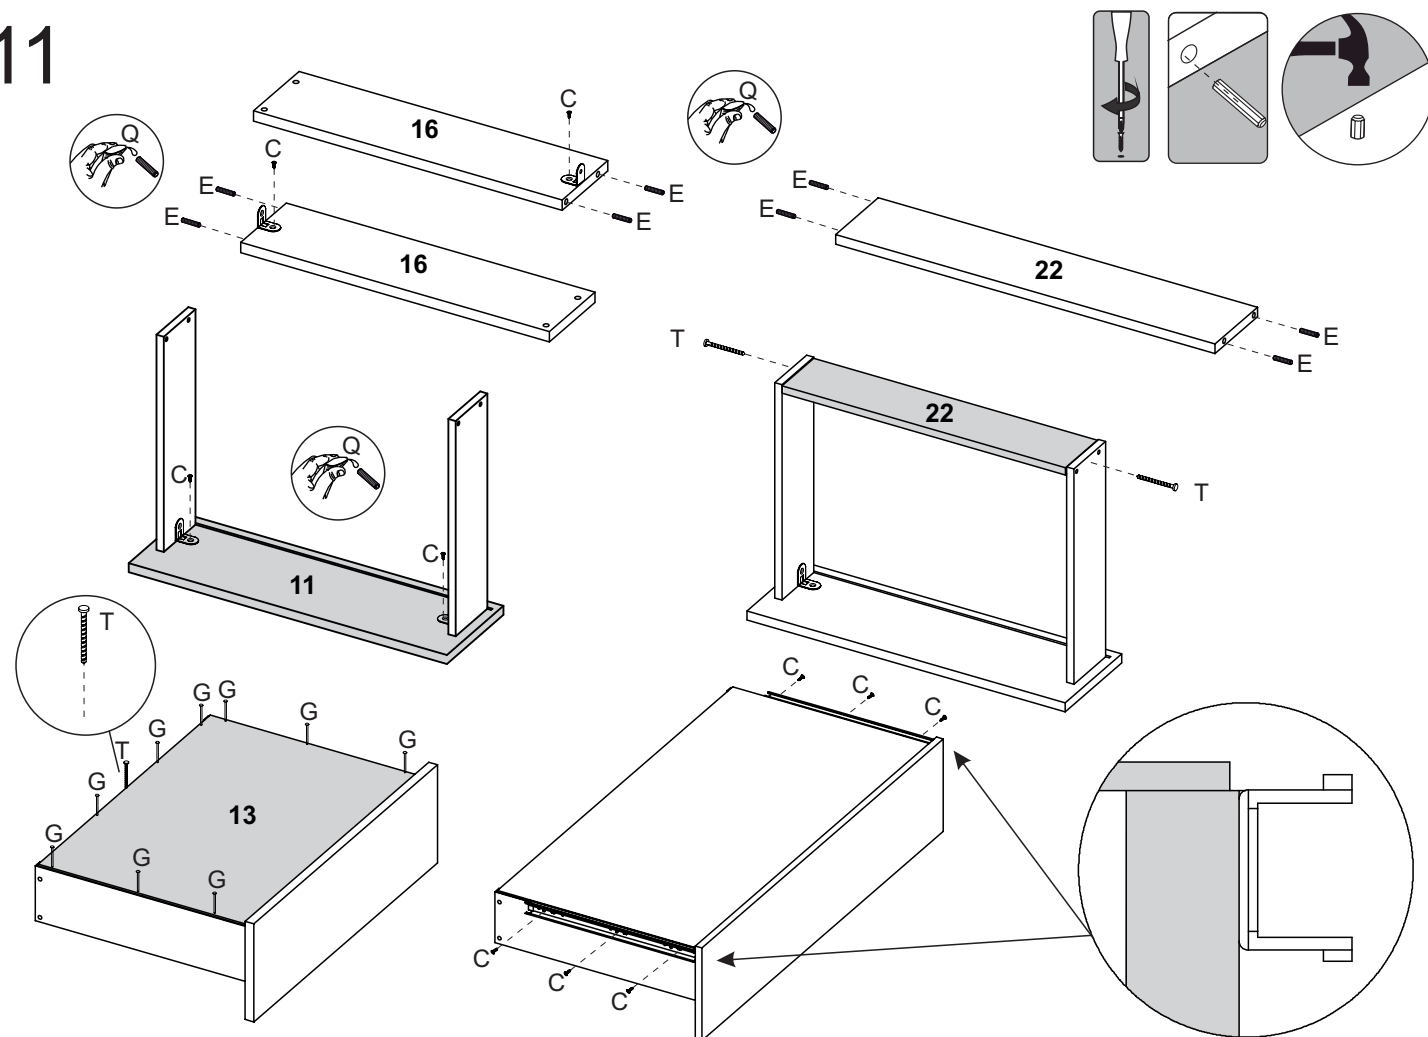




12

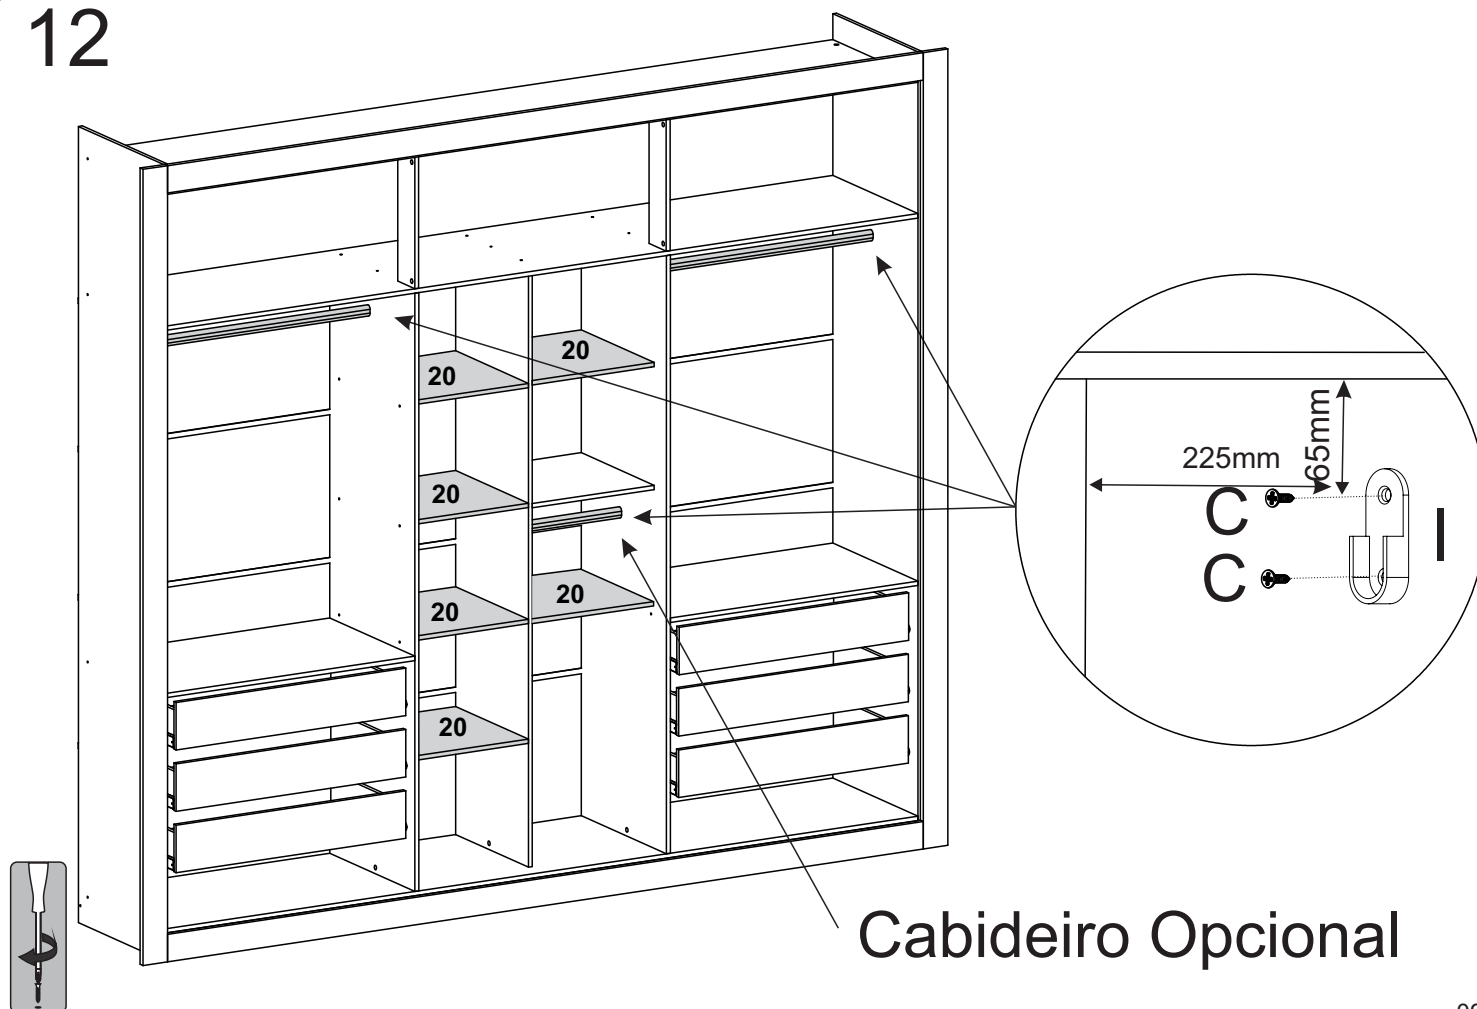

13

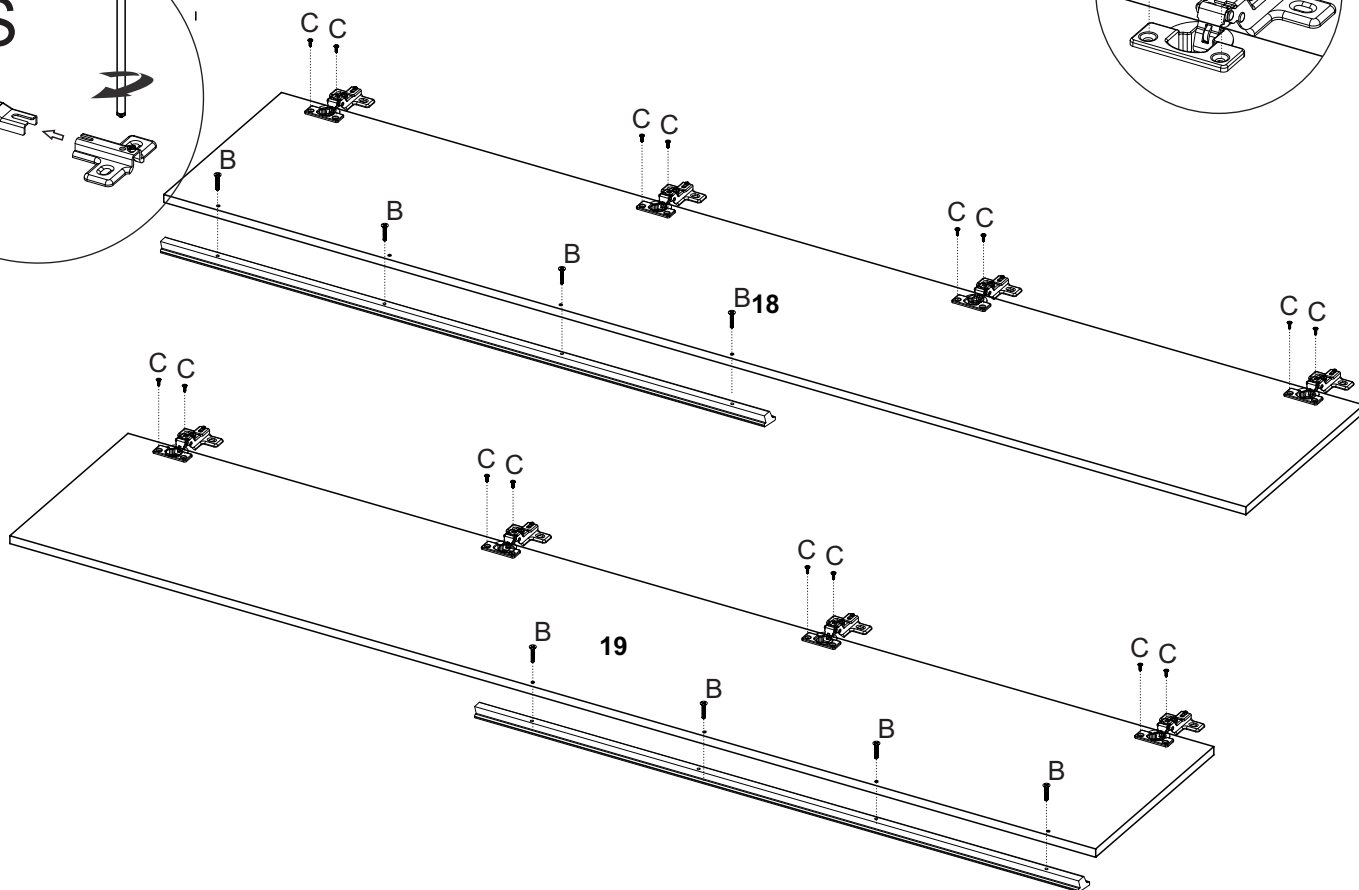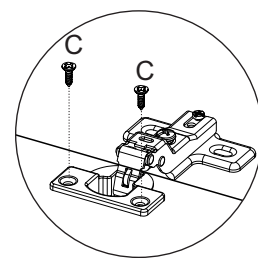
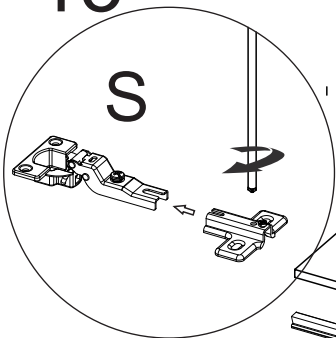


14

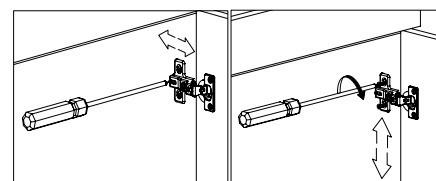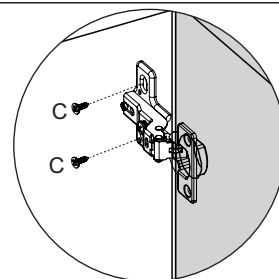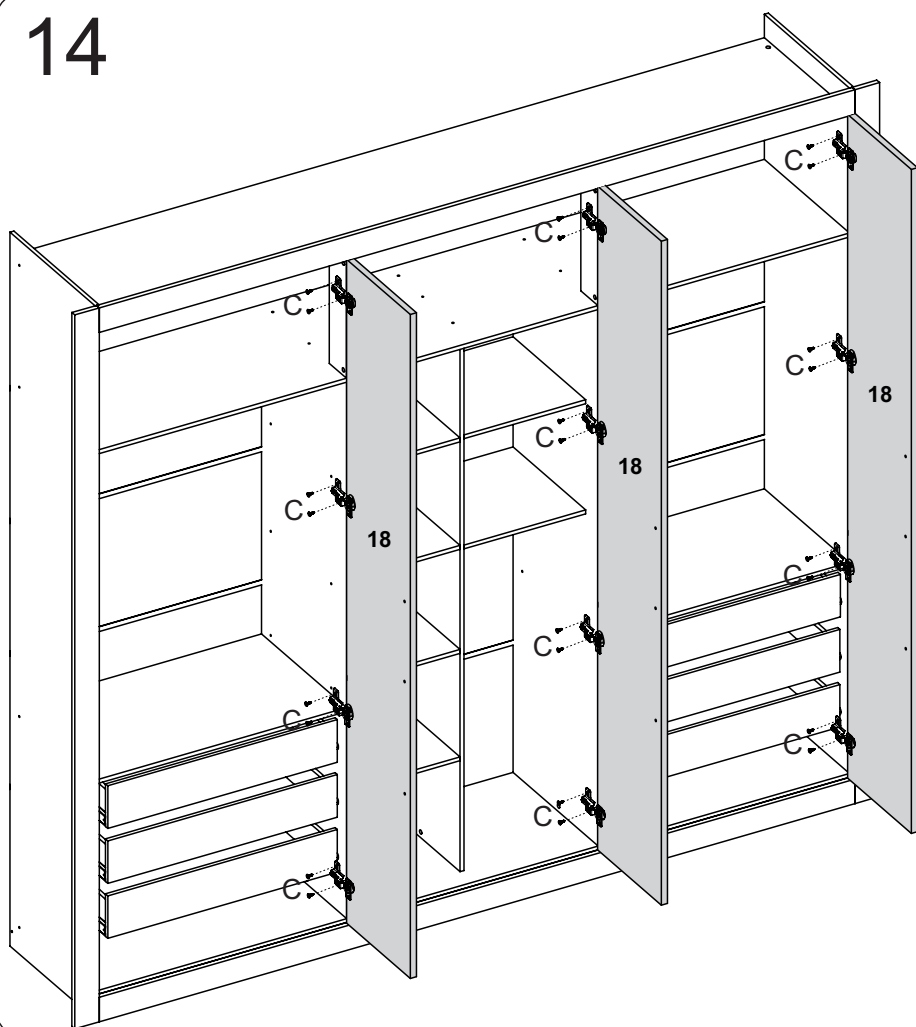


Regulagem da Dobradiça

15

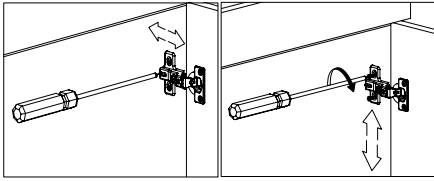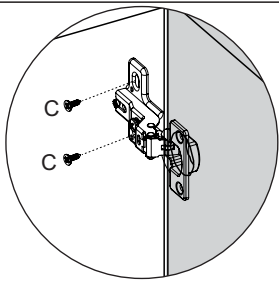

Regulagem da Dobradiça

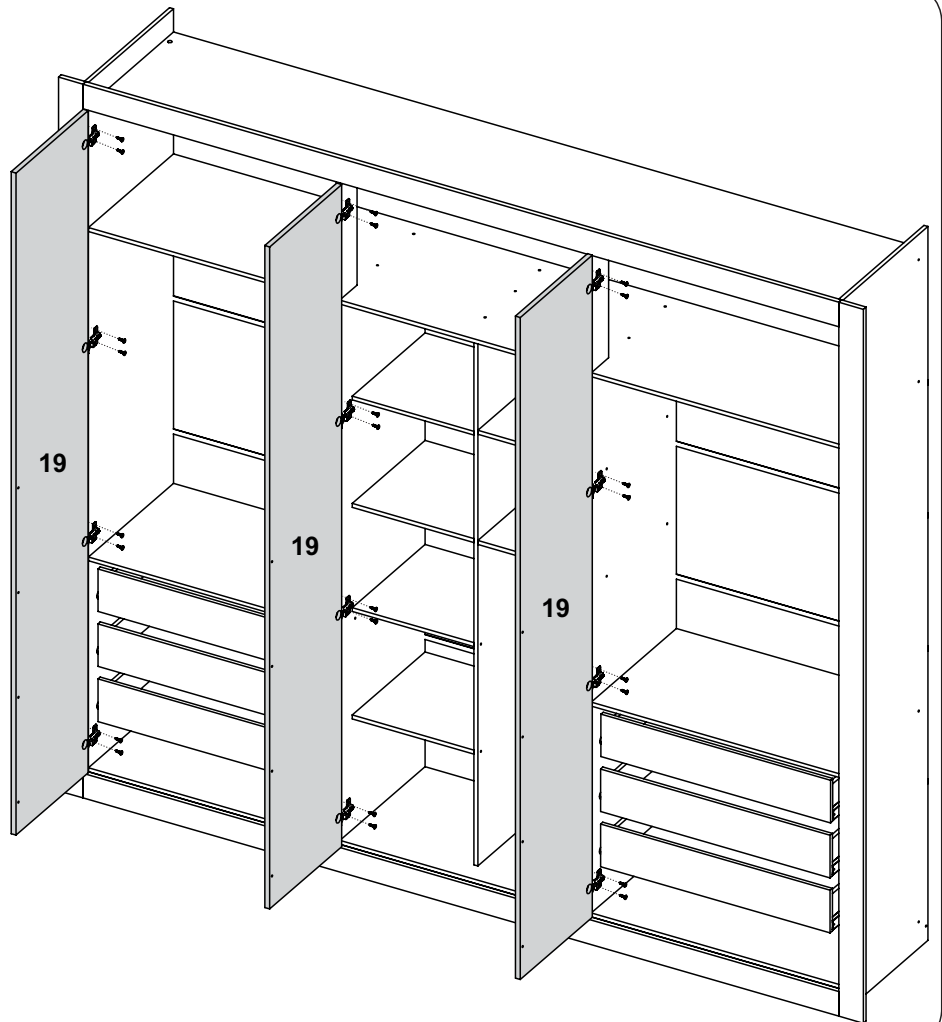

16

FIXAÇÃO DO ESPELHO(se adquirido)

