

MANUAL DE MONTAGEM


ASSEMBLY INSTRUCTIONS

INSTRUCCIONES DE MONTAJE

CAMA

BED

CAMA

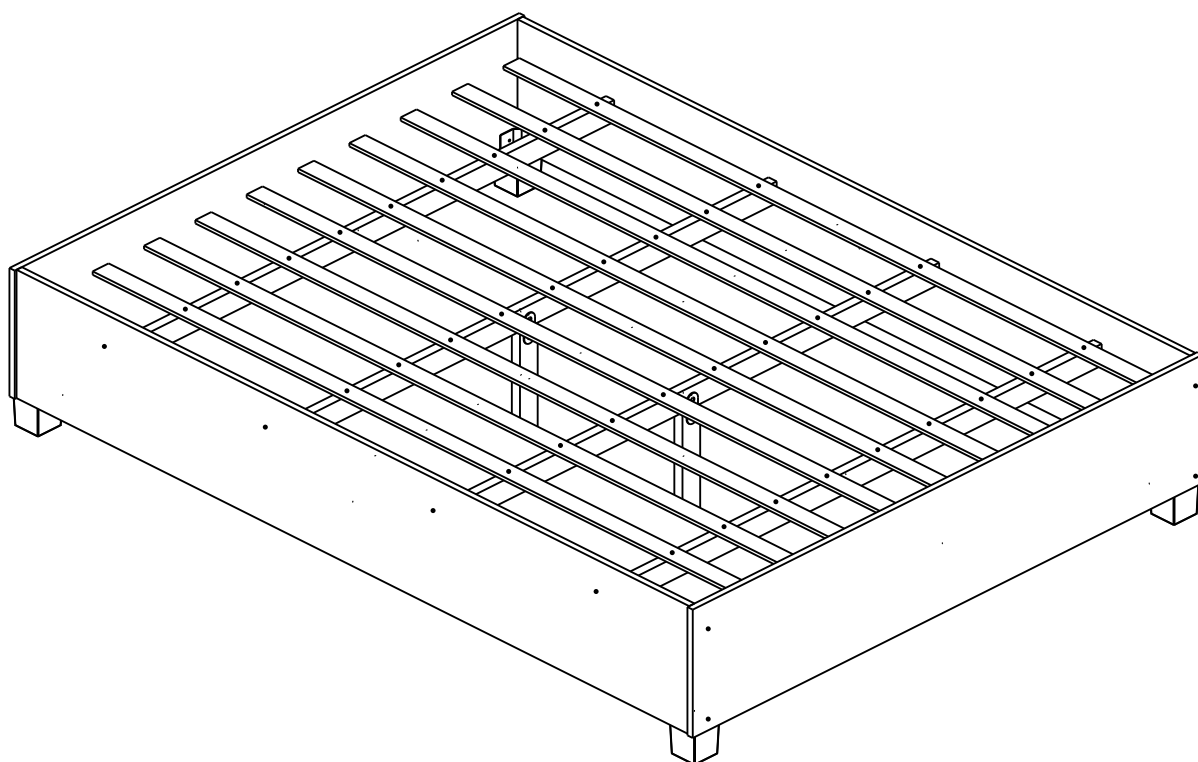

PEÇAS POR VOLUME / PARTS BY VOLUME / PIEZAS POR VOLUMEN

CAIXA RODAPE / ROUND BOX / CAJA DE RUEDAS






NUM.	COD.	DESCRIÇÃO / DESCRIPTION / DESCRIPCIÓN	QDT QTY. CTD.	MEDIDAS (MM) SIZE (MEASUREMENTS) (MM) DIMENSIONES (MM)
1	13752	BARRA CAMA / BED BAR / BARRA DE CAMA	2	1900x296x15
2	13771	PÉ DA CAMA / FOOT OF BED / PIES DE CAMA	4	70x70x70
3	13751	PAINEL CABECEIRA PESEIRA / HEADBOARD FOOT PANEL / PANEL DE PIES DE CABECERO	2	1440x296x15
4	13753	QUINTO/SEXTO PÉ / FIFTH/SIXTH FOOT / QUINTO/SEXTO PIES	2	240x50x23
5	13759	RIPA CAMA / BED STRIP / TIRA DE CAMA	10	1840x45x8
6	13758	TRAVESSÃO CAMA / BED BEDDING / ROPA DE CAMA	4	1400x50x23
7	13756	KIT FERRAGEM CAMA BOX / HARDWARE KIT / HERRAJES CAJA DE CAMA	1	-

COMPOSIÇÃO KIT FERRAGEM / HARDWARE KIT COMPOSITION / COMPOSICIÓN KIT DE HERRAJES


LETRA LETTER LETRA	COD.	IMAGEM IMAGE IMAGEN	DESCRIÇÃO DESCRIPTION DESCRIPCIÓN	LETRA LETTER LETRA	COD.	IMAGEM IMAGE IMAGEN	DESCRIÇÃO DESCRIPTION DESCRIPCIÓN
A	13805		PARAFUSO 7,0x50 SOBERBO SCREW / TORNILLO	E	13807		CHAPA 2 FUROS PLATE 2 HOLES / PLACA 2 AGUJEROS
B	13841		PARAFUSO 3,5x16 CHATO SCREW / TORNILLO	F	13808		CHAVE ALEN ALEN KEY / ALÉN CLAVE
C	4387		PARAFUSO 3,5x12 FLANGEADO SCREW / TORNILLO	G	13757		TAMPINHA PARAFUSO 13MM SCREW CAP / TAPÓN DE ROSCA
D	13806		PREGO 13X15 NAIL / CLAVO				

NECESSÁRIO PARA MONTAGEM


REQUIRED FOR ASSEMBLY / REQUERIDO PARA EL MONTAJE

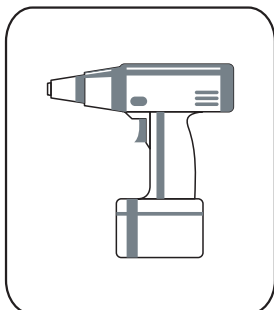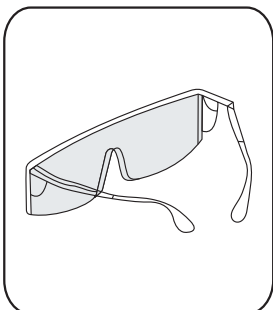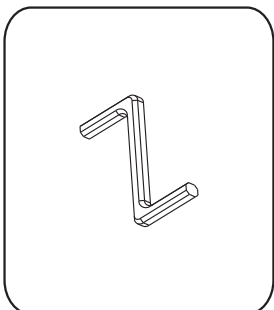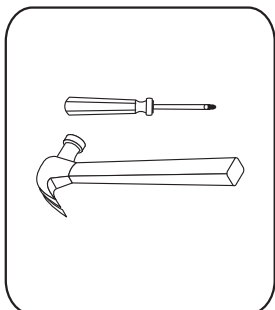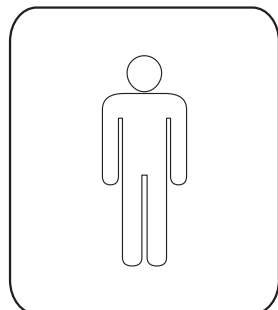


1

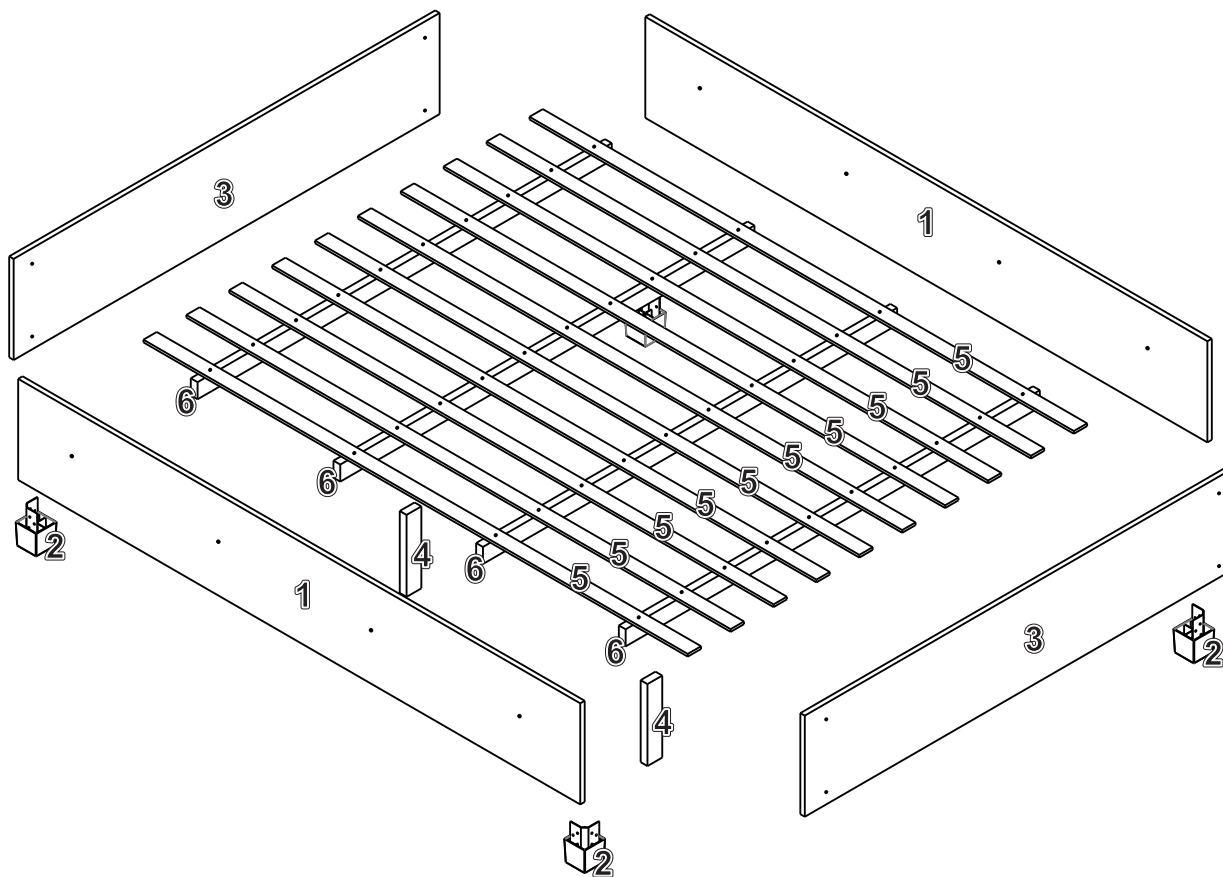



2

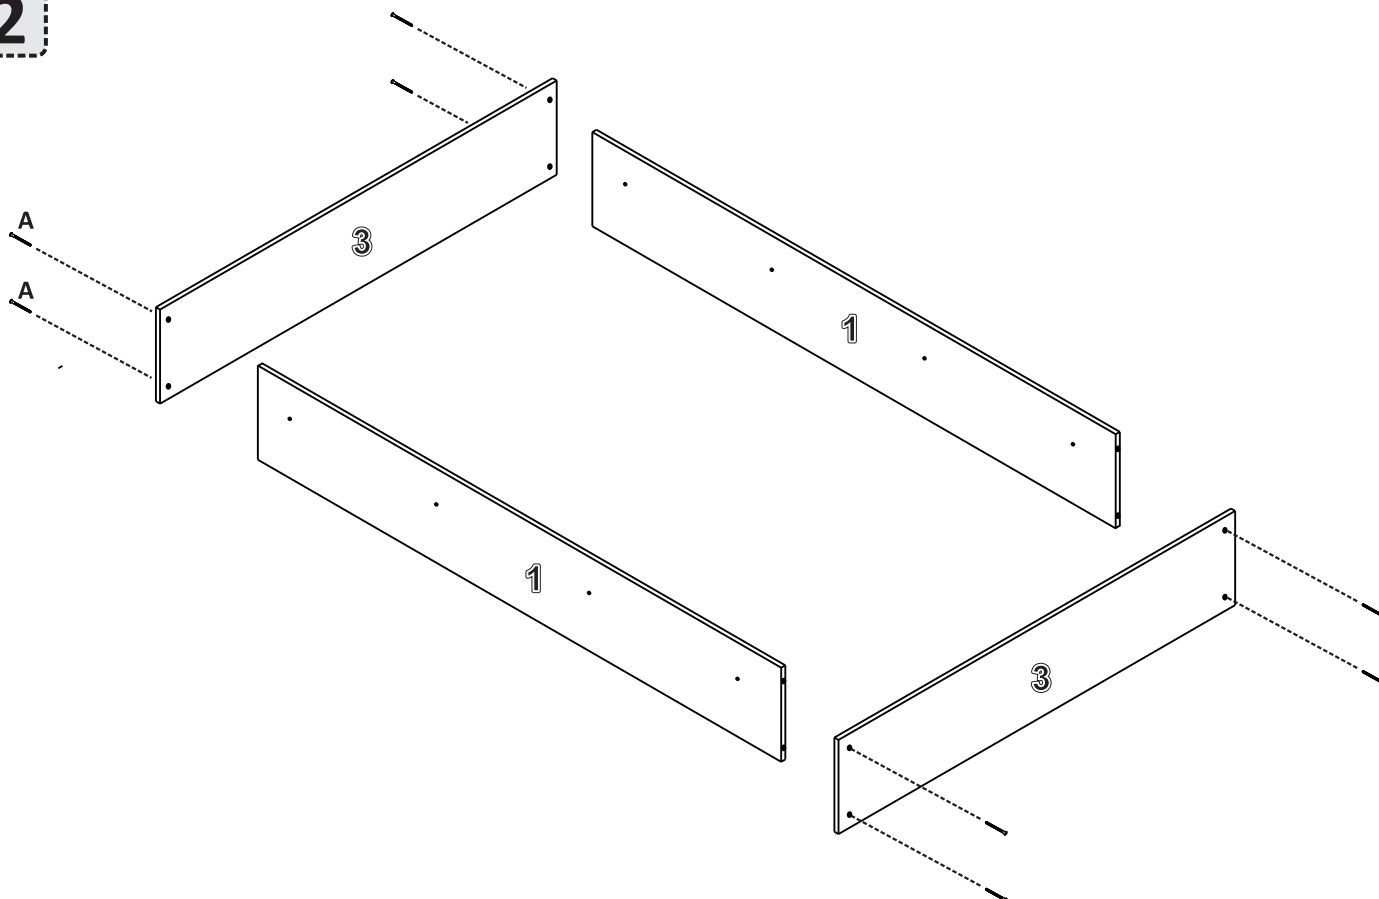


3

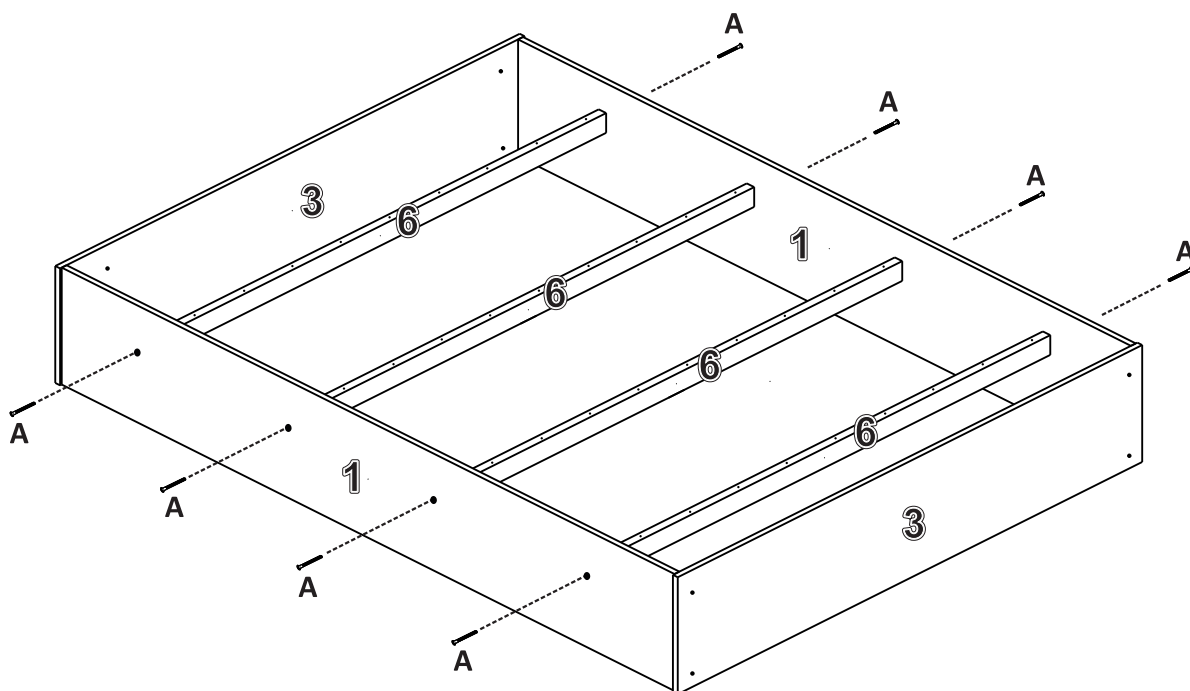

4

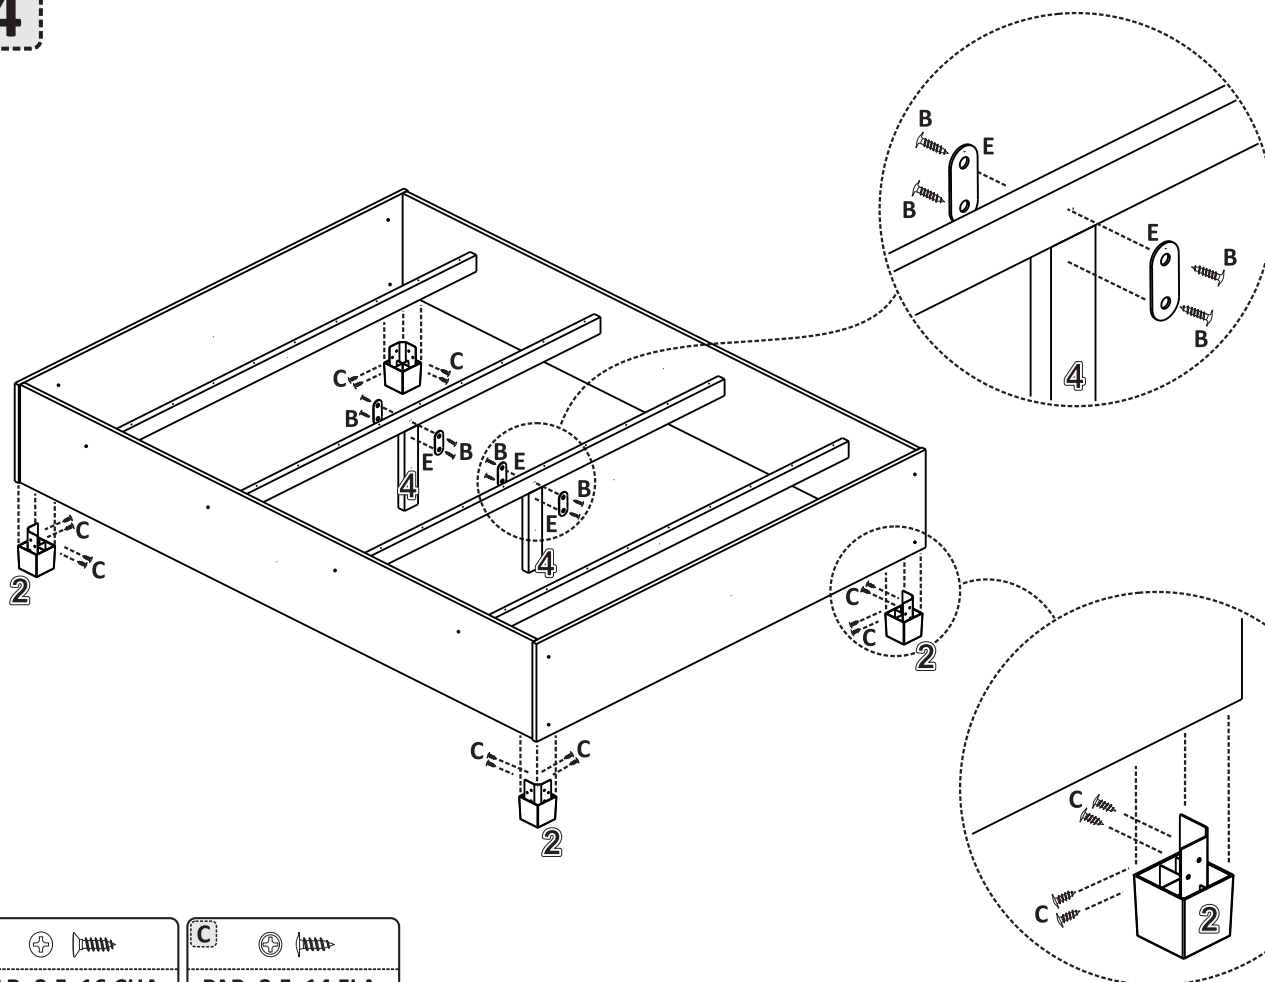

5

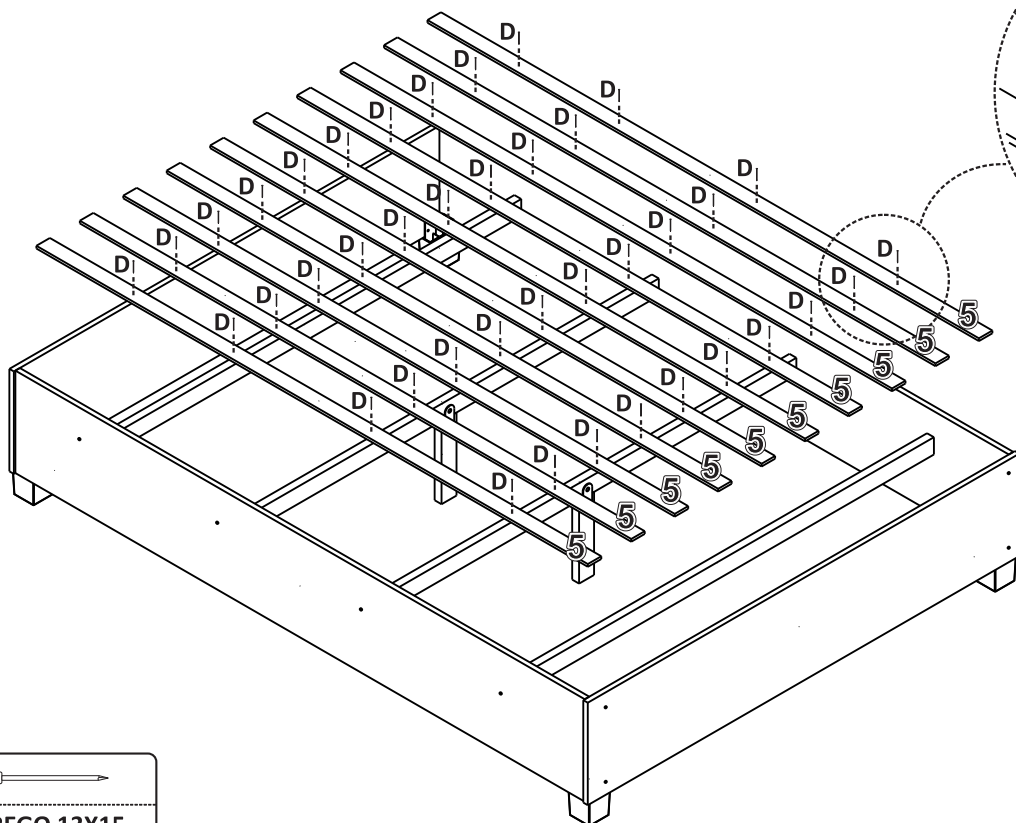

6

