


9°


Passo
Paso
Step

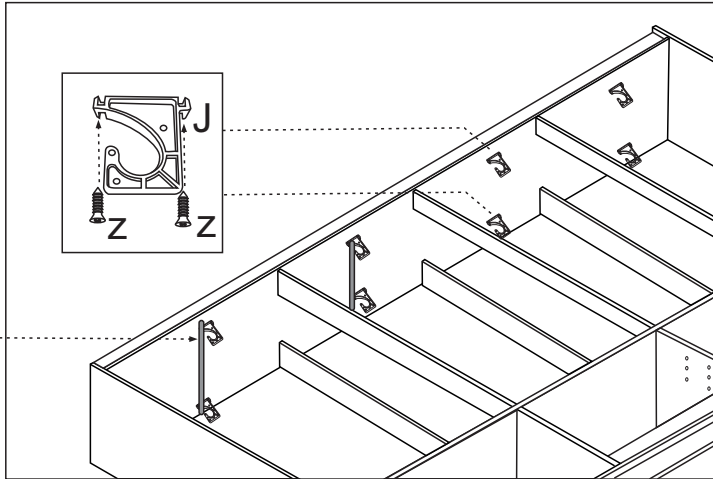

Pau de Cabide

10°

Passo
Paso
Step

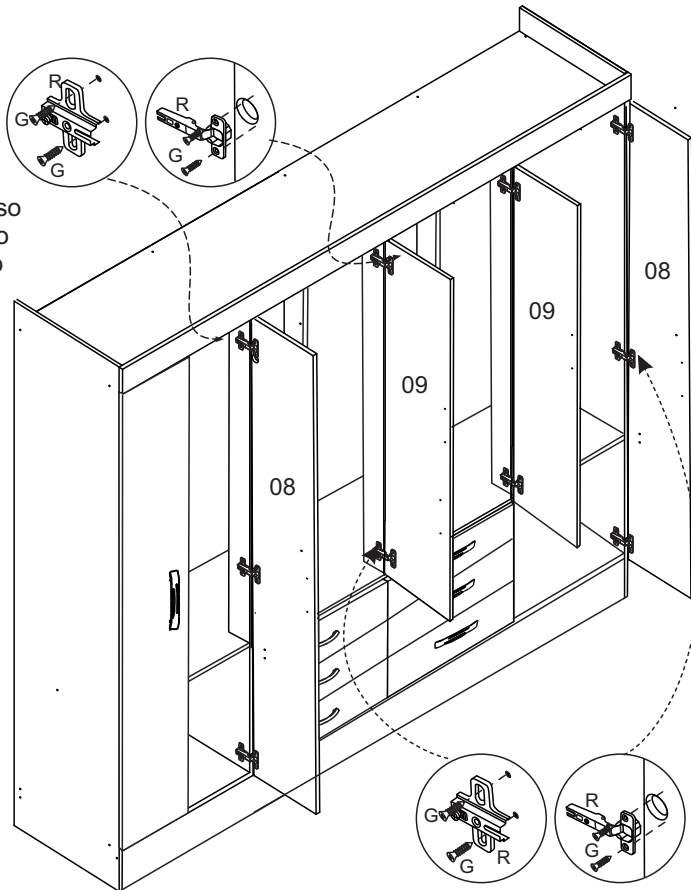


Manual de Montagem
RP 8 PORTAS 6 GAVETAS

PARIS




Componentes das Ferragens:

A	Cavilha 6 x 30		60
B	Parafuso 3,5 x 35 c/chata		28
C	Porca cilíndrica		12
D	Cola		02
E	Rolete para suporte		04
F	Prego 10 x 10		90
G	Parafuso 3,5 x 12 c/c		108
I	Cantoneira		14
J	Suporte Cabideiro		08
K	Puxador 98 mm		14
M	Sapata U 15mm		02
O	Cabideiro de madeira revestido		04
P	Parafuso 3,5x22 c/flangeado		28
R	Dobradiça		20
S	Sapata L		04
T	Parafuso 3,5 x 20		04
U	Fixador de Costa		22
V	Corrediça		12
X	Prego 10 x 10 anelado		72
Z	Parafuso 3,5 x 16		12

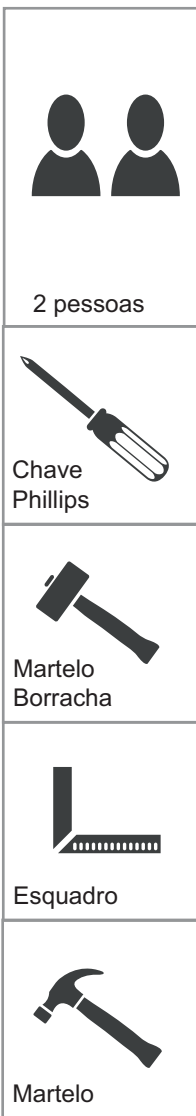


7° Passo
Paso
Step


MONTAGEM GAVETA

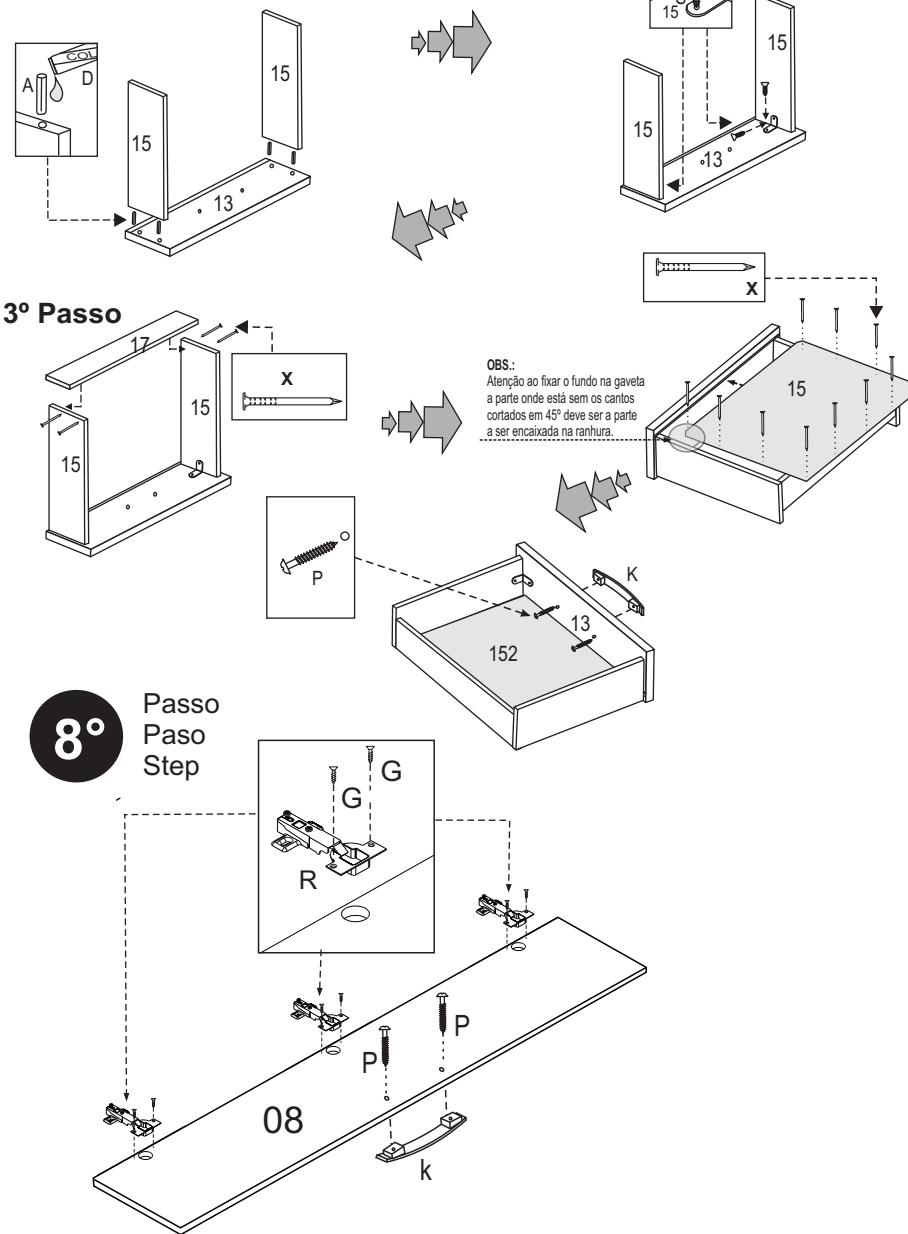

5°
Passo
Paso
Step

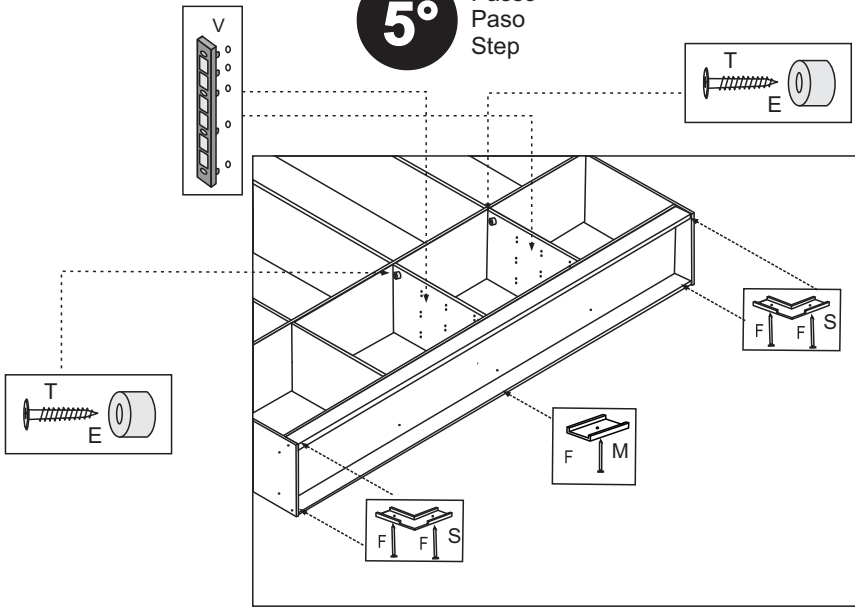


6°

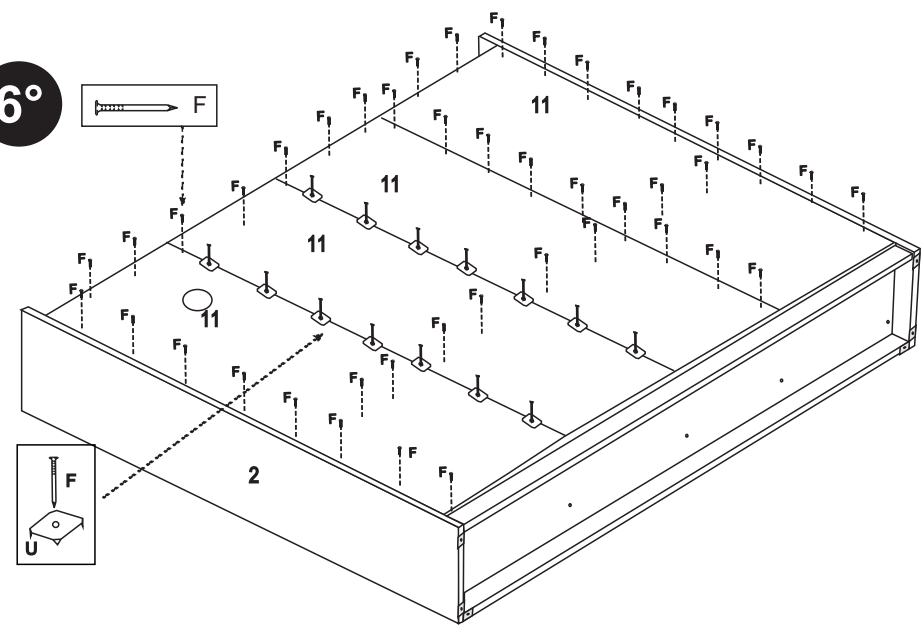


Obs: Para solicitar assistência técnica, utilize o código da ferragem ou peça indicada

Cód.	Descrição da Peça	Unid.	Medida
01	Lateral Esquerda	01	1830x385
02	Lateral direita	01	1830x385
03	Divisória	03	475x385
04	Tampo superior	01	1813x385
05	Tampo inferior	01	1813x385
06	Tampo Central	01	1813x385
07	Rodapé Frontal	01	1813x110
08	Porta Grande	04	1660x225
09	Porta Média	04	1330x225
10	Frontal	01	1813x60
11	Costa	04	1670x459
12	Pilastra	06	1145x110
13	Fronte de gaveta	06	455x16
14	Rodapé traseiro	01	1813x110
15	Fundo gaveta	06	440x350
16	Lateral gaveta	12	350x100
17	Traseiro gaveta	06	418x080


1° Passo
Paso
Step

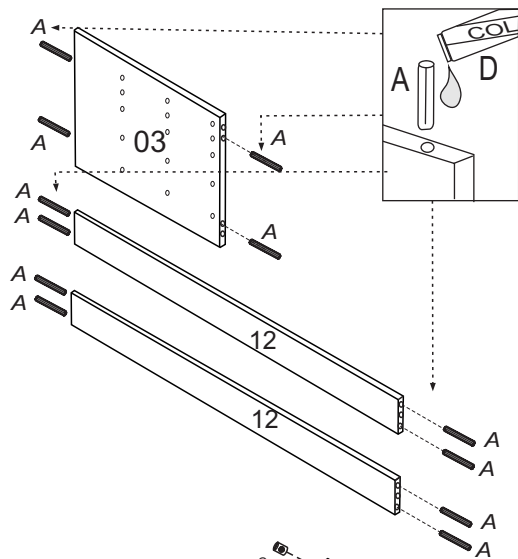

2° Passo
Paso
Step

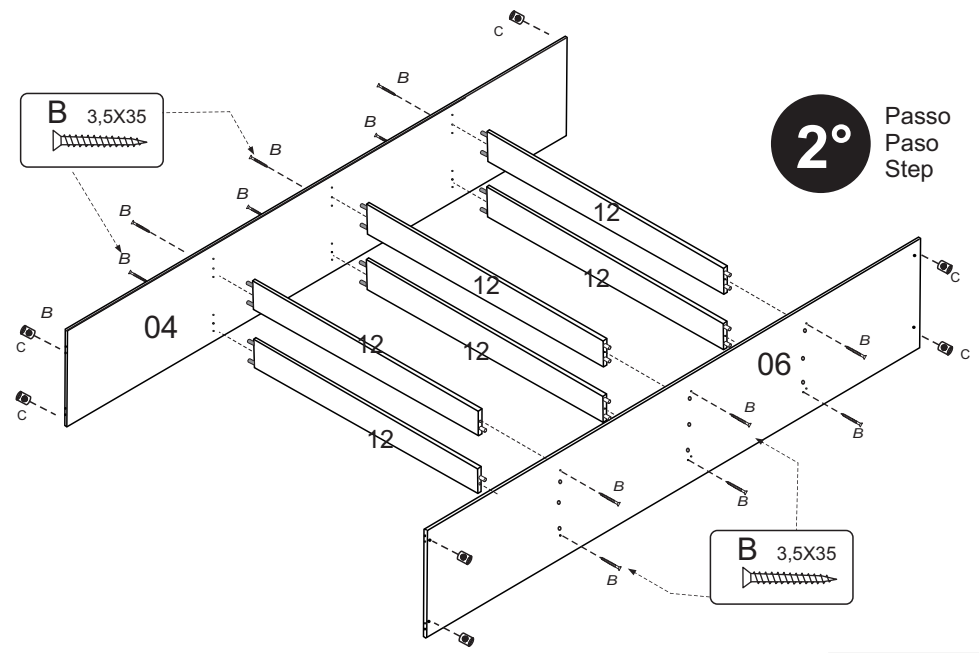

3° Passo
Paso
Step

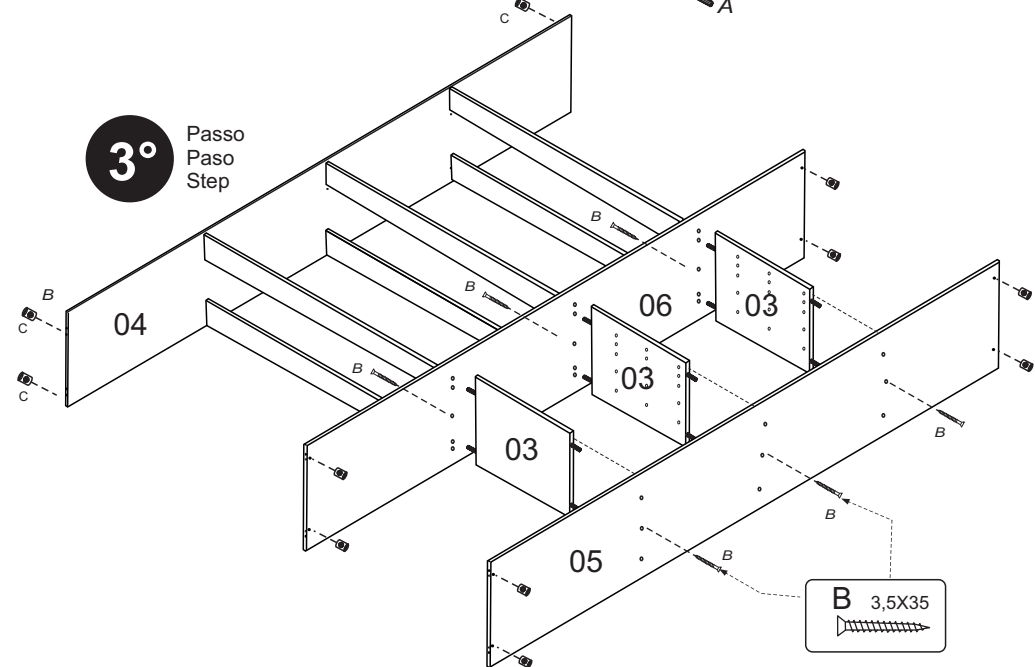

4° Passo
Paso
Step

