


ACESSÓRIOS | ACCESSORIES | ACCESORIOS | LISTE D'ACCESSOIRES

A

x22



CAVILHA | WOOD DOWEL | CLAVIJAS MADERA

B

x4



PARAFUSO MINIFIX | MINIFIX SCREW | TORNILLO MINIFIX

C

x4



TAMBOR | CAM LOCK | TAMBOR 14x11

D

x35



PARAFUSO 3,5x25 | 3,5x25 SCREW | TORNILLO 3,5x25

E

x18



PARAFUSO 3,5x40 | 3,5x40 SCREW | TORNILLO 3,5x40

F

x15



PARAFUSO 3,5x50 | 3,5x50 SCREW | TORNILLO 3,5x50

G


x8



PARAFUSO 3,5x12 | 3,5x12 SCREW | TORNILLO 3,5x12

H

x8



PARAFUSO 6x60 | 6x60 SCREW | TORNILLO 6x60

I

x1

PARAFUSO 5,5x65 | 5,5x65 SCREW | TORNILLO 5,5x65

J

x5

PARAFUSO 4,0x35 | 4,0x35 SCREW | TORNILLO 4,0x35

K

x32

PARAFUSO 3,5x10 | 3,5x10 SCREW | TORNILLO 3,5x10

L

x2

PERFIL TRILHO 1765mm

M

x40

PREGO | NAIL CLAVO 10x10

N

x4

TAPA FURO | STICKERS 18MM

O


x2



SISTEMA PORTA DSELIZANTE

P


x4



CHAPA METÁLICA 35x15 | SHEET 35x15

Q

x1



TAMPA PASSA FIO DESK GROMMET

R

x16



PINO GUIA | GUIDE PIN

S

x2



SACHE DE COLA WHITE GLUE

T

x9



DISTANCIADOR 15x30 DISTANCER 15x30

U

x9





BUCHA PLÁSTICA 8MM | PLUG


Início da Montagem | Assembly Start | Início del Ensamble | Début du Montage

1º Passo - Preparação das Peças

Pass / Paso / Étape

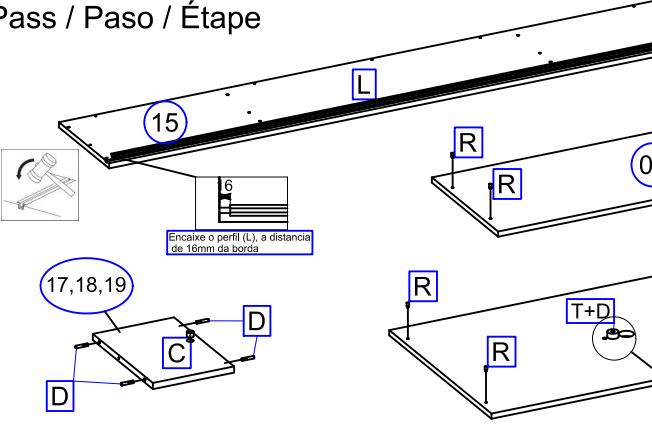

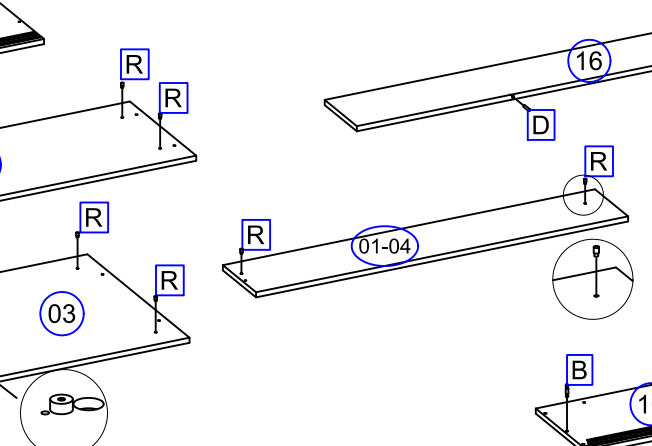

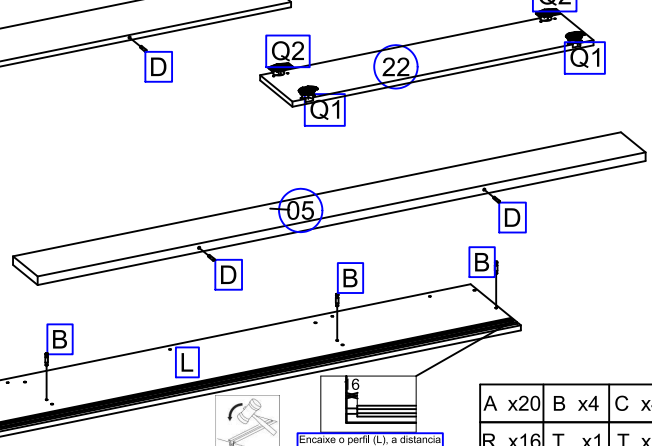

A x20

B x4

C x4

O x1

R x16


T x1

T x1

L x2

2º Passo

Pass / Paso / Étape

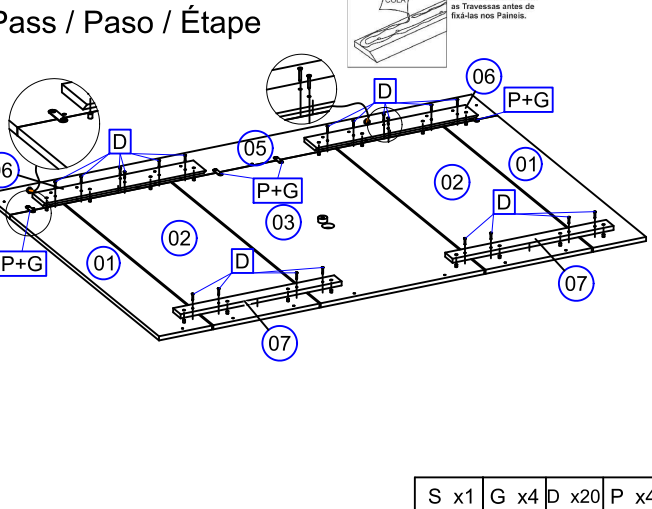

S x1


G x4

D x20

P x4

3º Passo

Pass / Paso / Étape

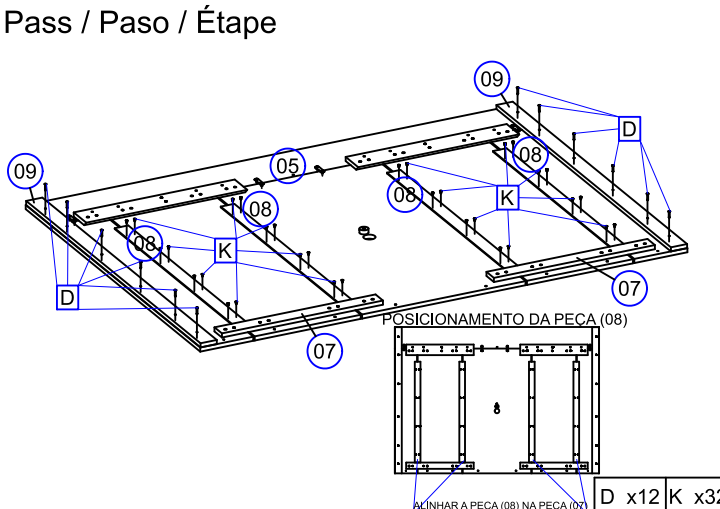


D x12

K x32

4º Passo

Pass / Paso / Étape

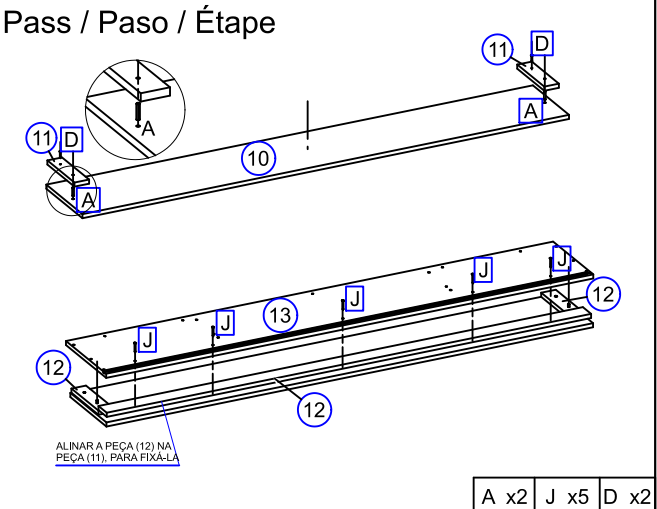


A x2

J x5

D x2

5º Passo

Pass / Paso / Étape

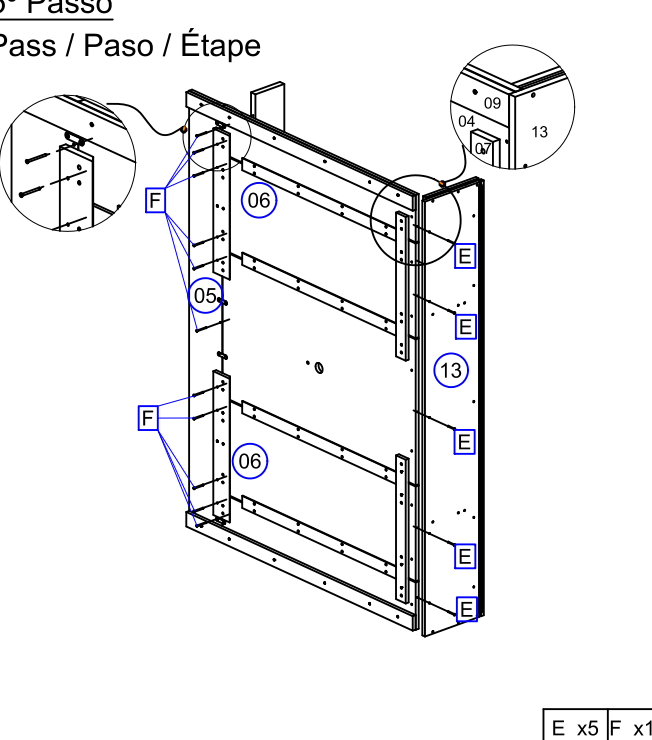


E x5

F x11

6º Passo


Pass / Paso / Étape

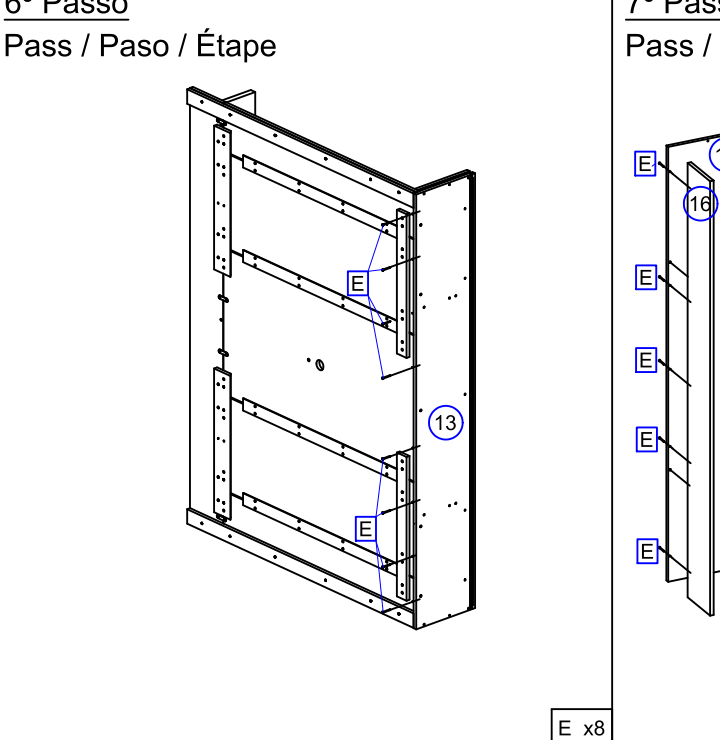

E x8

7º Passo

Pass / Paso / Étape

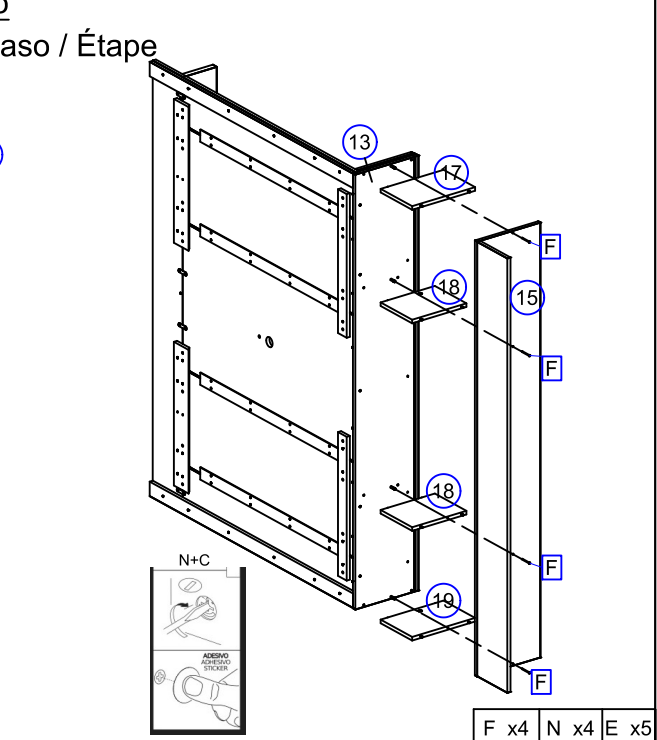


F x4

N x4

E x5

8º Passo


Pass / Paso / Étape

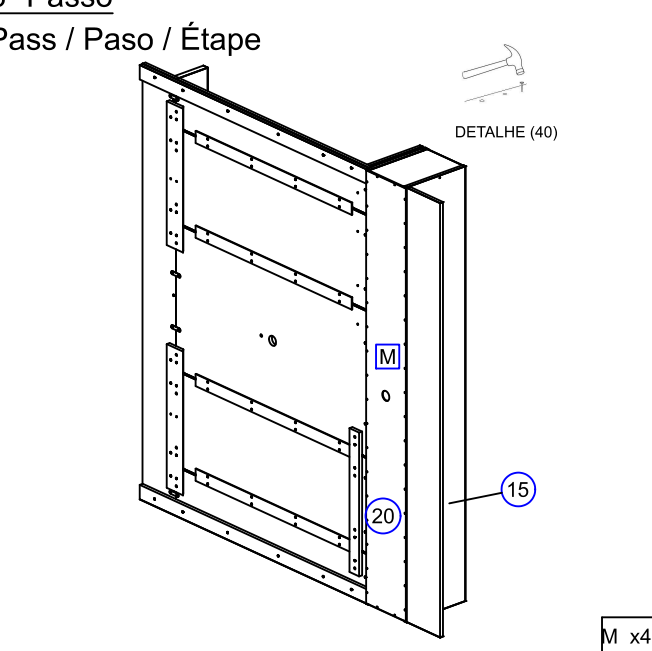

M x40

10º Passo

Pass / Paso / Étape

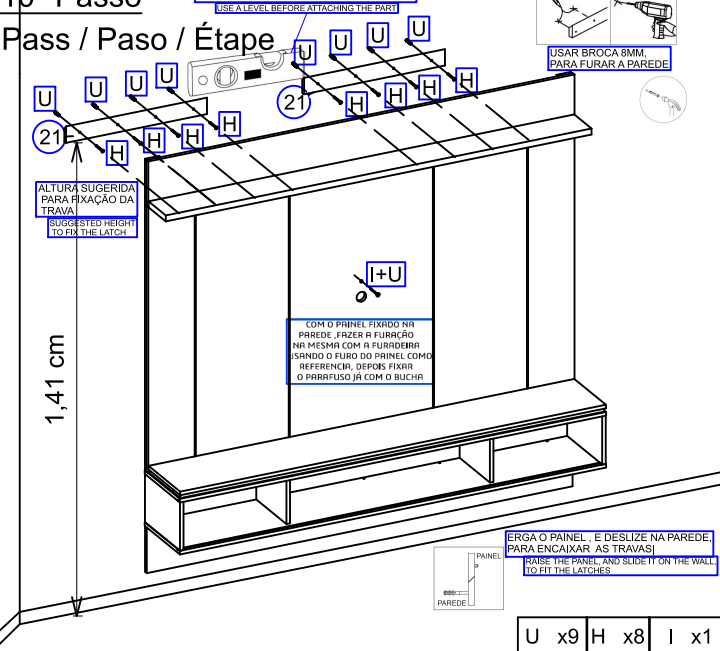


U x9

H x8

I x1

11º Passo

Pass / Paso / Étape

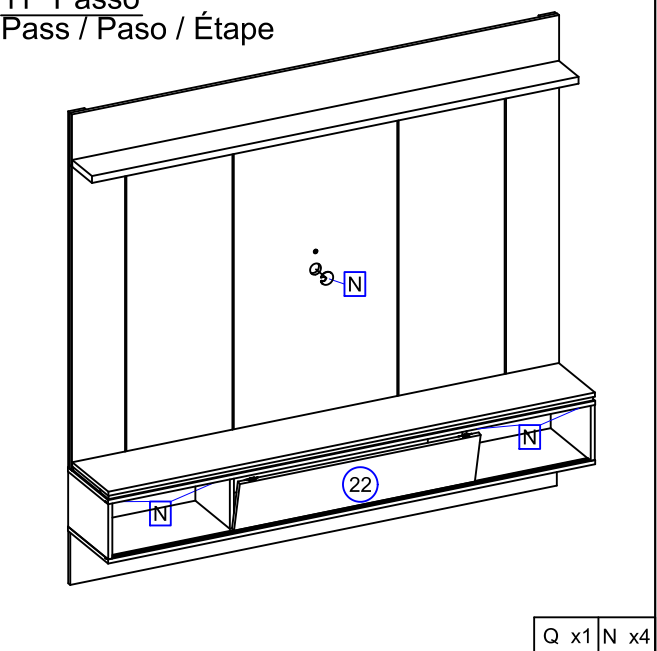

Q x1

N x4