
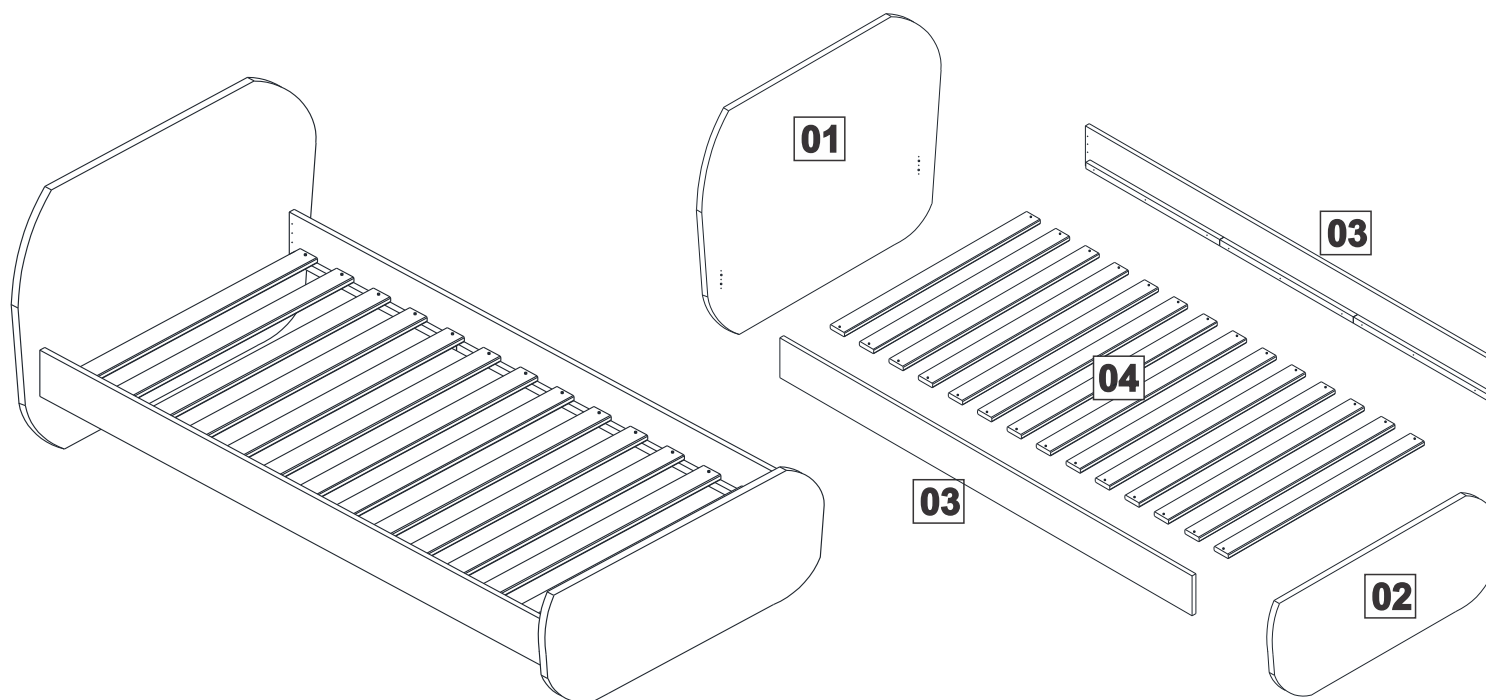


INSTRUÇÃO DE MONTAGEM
CAMA SOLTEIRO ESTEBAN
Ref.: 9905



1h




Lista de peças


- 1- CABECEIRA
- 2- PEZEIRA
- 3- BARRA
- 4- LASTRO

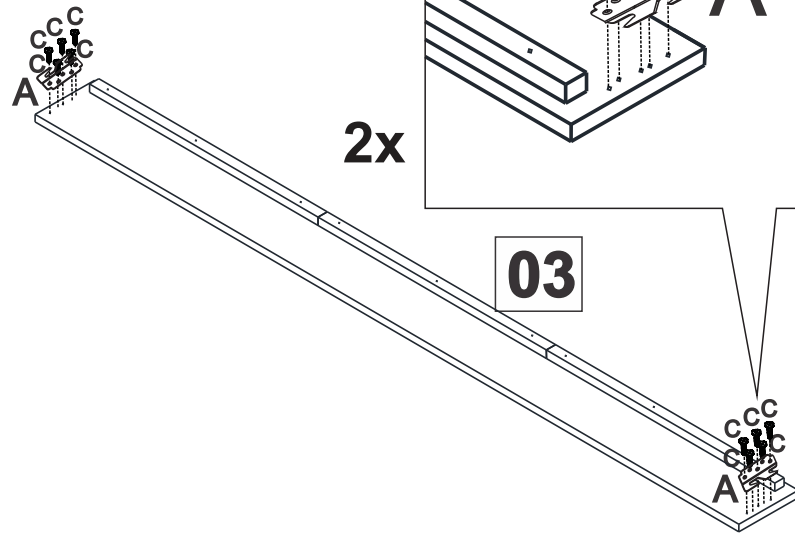
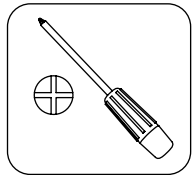


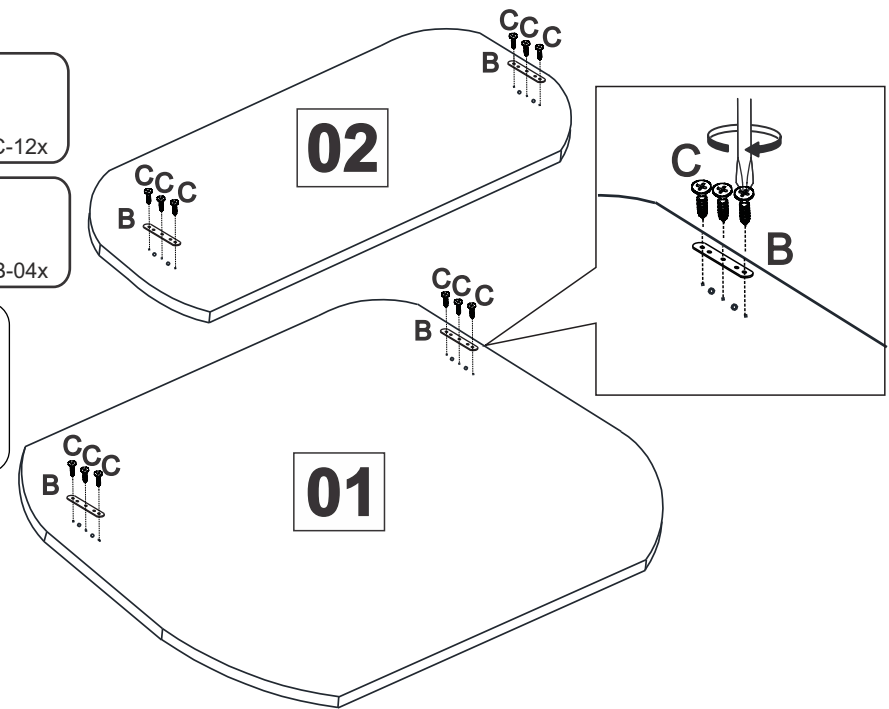
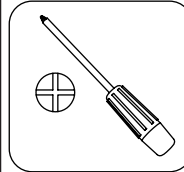


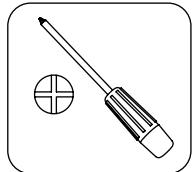

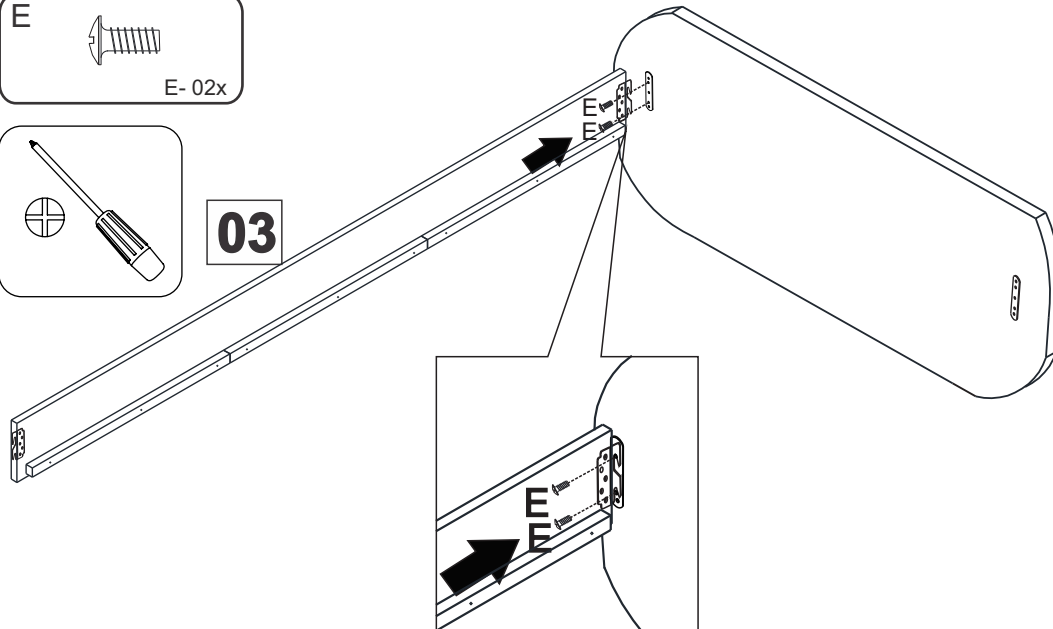
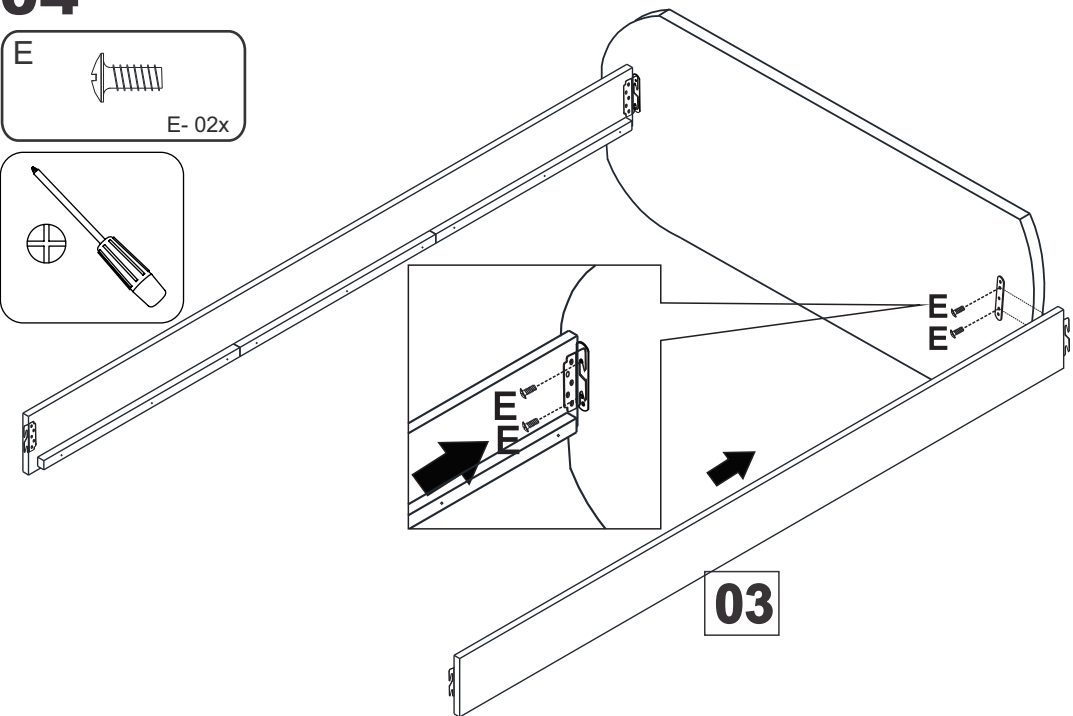
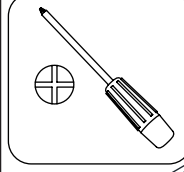

QT.

01
01
02
12

FERRAGENS

A		04
B		04
F	 65x18x18mm	02

		
C x32		4,0x16
D x28		4,0x30
E x08		1/4x15

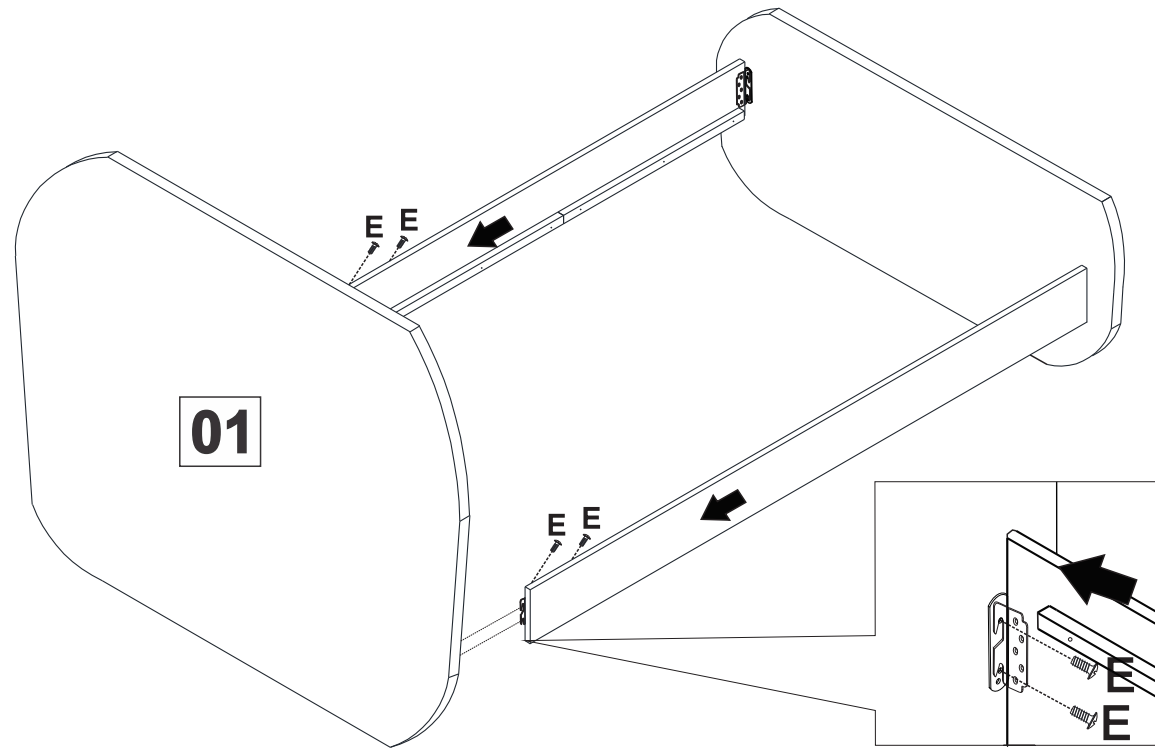
01**02****03****03****04**

05

E



E- 04x



06

D



D-28x

F



65x18x18mm F-02x

