


ACESSÓRIOS | ACCESSORIES | ACCESORIOS | LISTE D'ACCESSOIRES

A  CAVILHA WOOD DOWEL CLAVIJAS MADERA x30	B  PARAFUSO MINIFIX MINIFIX SCREW TORNILLO MINIFIX x8	C  TAMBOR CAM LOCK TAMBOR 14x11 x8	D  PARAFUSO 3,5x25 3,5x25 SCREW TORNILLO 3,5x25 x5	E  PARAFUSO 3,5x40 3,5x40 SCREW TORNILLO 3,5x40 x5	F  PARAFUSO 4,0x50 4,0x50 SCREW TORNILLO 4,0x50 x16	G  PARAFUSO 3,5x12 3,5x12 SCREW TORNILLO 3,5x12 x4					
H  PARAFUSO 3,5x25 3,5x25 SCREW TORNILLO 3,5x25 x1	I  PREGO NAIL CLAVO 10x10 x58	J  CANTONEIRA 18x18 METAL CORNER ESQUINA METALICA x2	K  JUNÇÃO DE FUNDO BOTTOM JUNCTION UNION DE FONDO x12	L  TRAPEZIO x1	M  SAPATA FOOT PIE x4	N  SAPATA L FOOT PIE x4	O  TAPA FURO STICKERS 18MM x5	P  SISTEMA PORTA DSELIZANTE x1 KIT x8 P1 x2 P2	Q  PERFIL TRILHO 1465MM x2	R  PERFIL H 726MM x1	
S  CORREDIÇA TELESÓPICA - Lado A  CORREDIÇA TELESÓPICA - Lado B x1	T  PARAFUSO 3,5x12 3,5x12 SCREW TORNILLO 3,5x12 x11	U  DISPOSITIVO TRIANGULAR x3	Início da Montagem Assembly Start Inicio del Ensamble Début du Montage								


1º Passo - Preparação das Peças

Pass / Paso / Étape

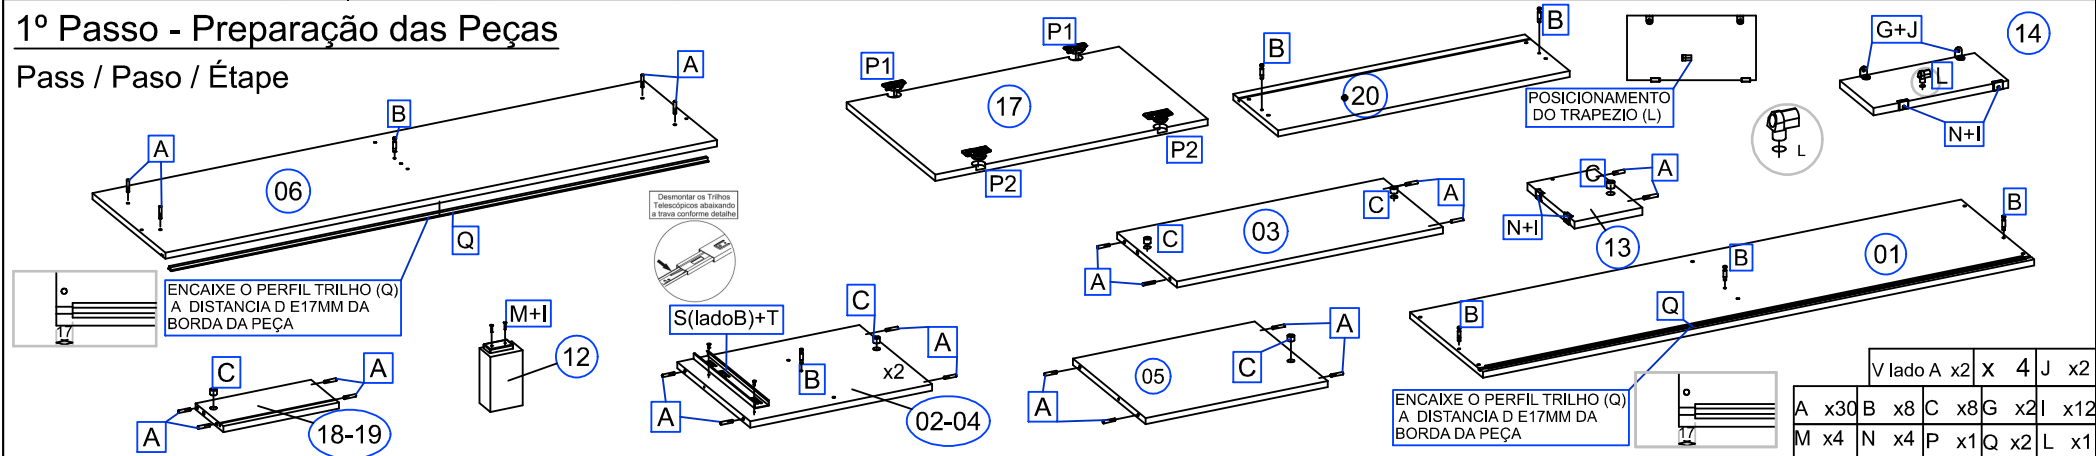


2º Passo

Pass / Paso / Étape

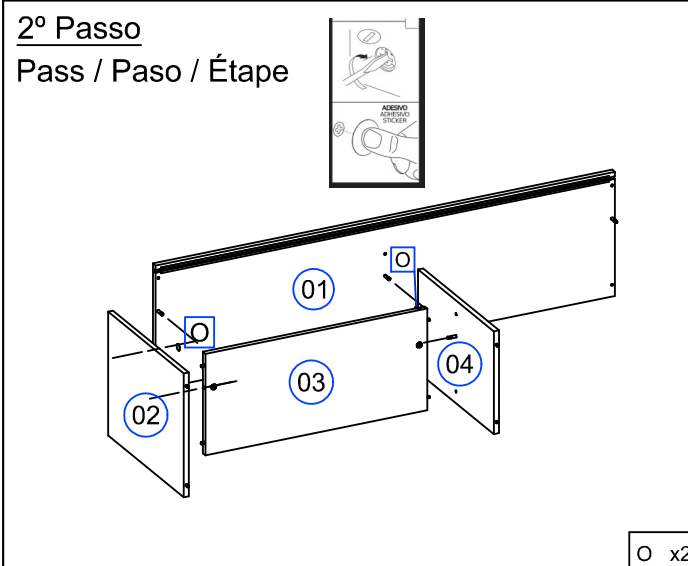


3º Passo

Pass / Paso / Étape

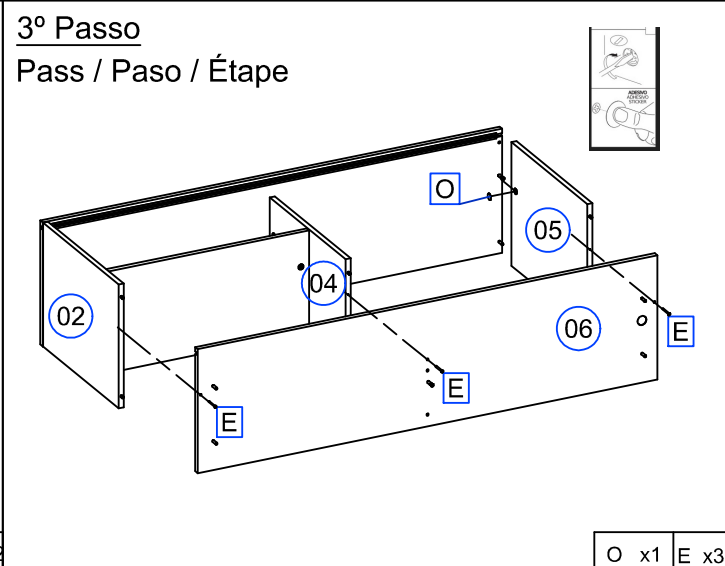


4º Passo

Pass / Paso / Étape

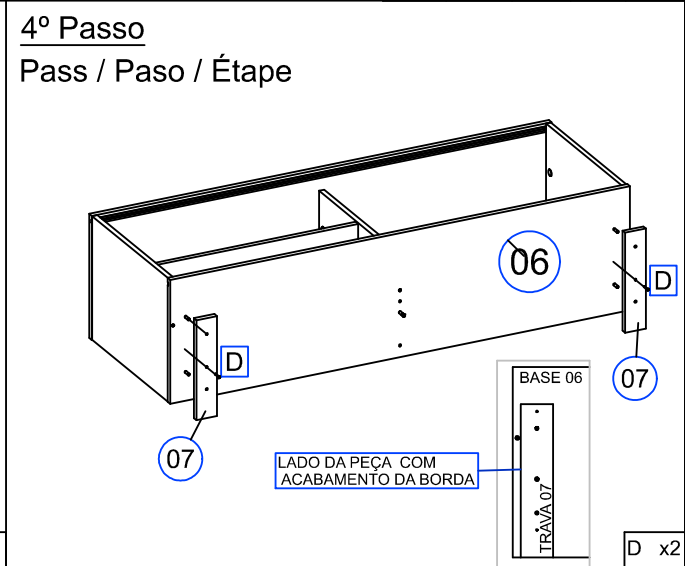


5º Passo

Pass / Paso / Étape

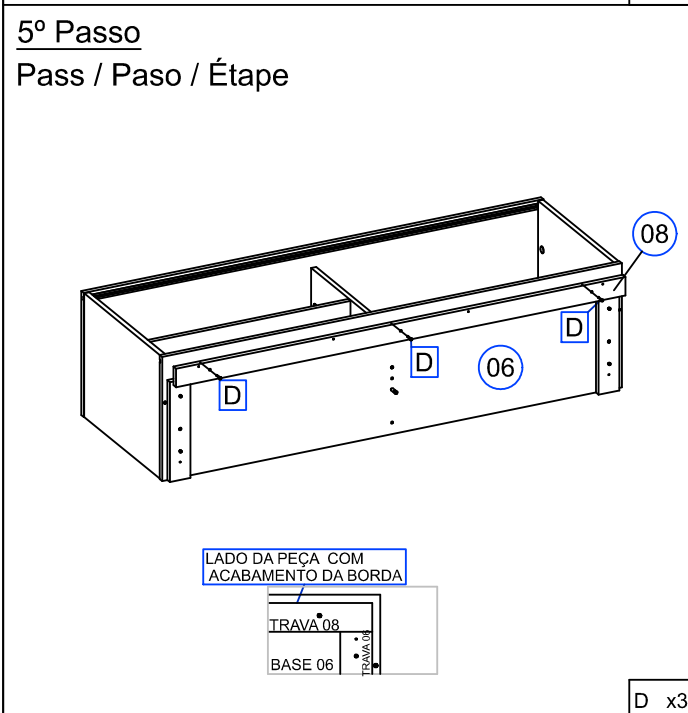


6º Passo

Pass / Paso / Étape

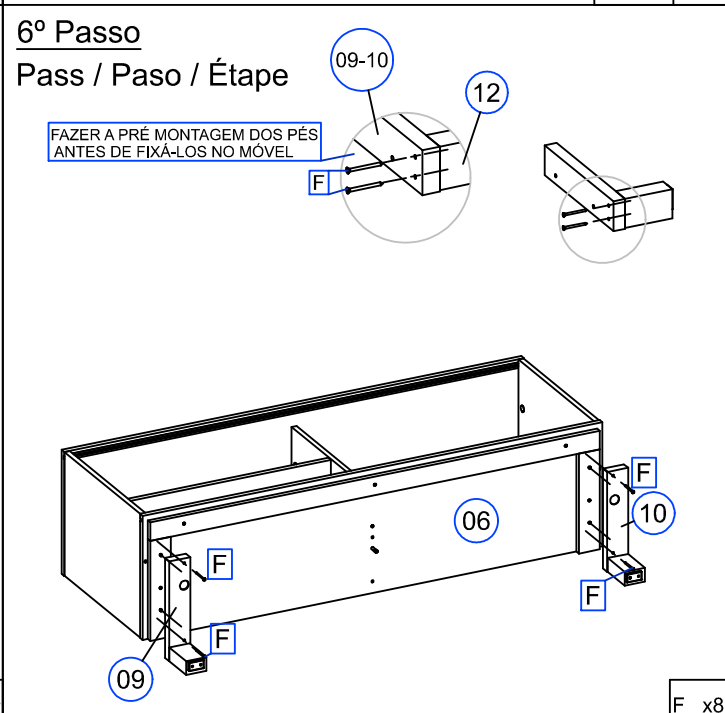


7º Passo

Pass / Paso / Étape

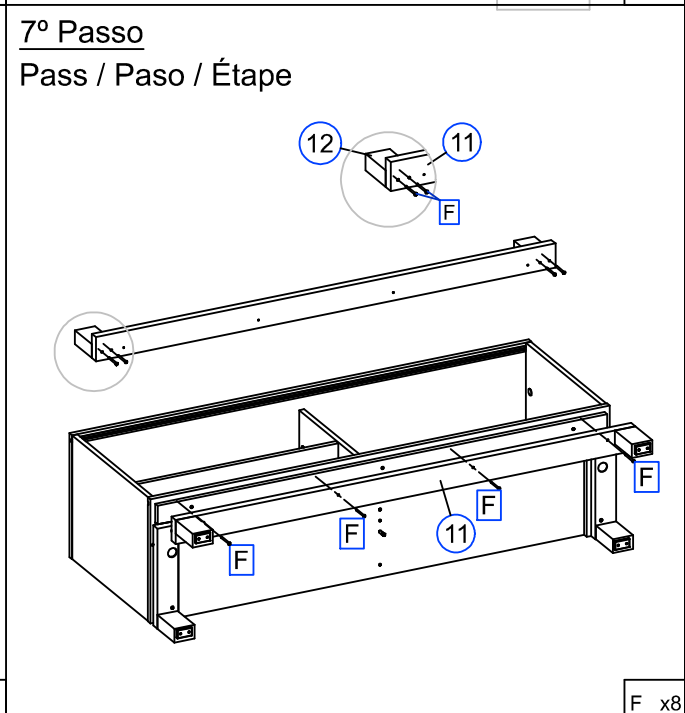

8º Passo

Pass / Paso / Étape

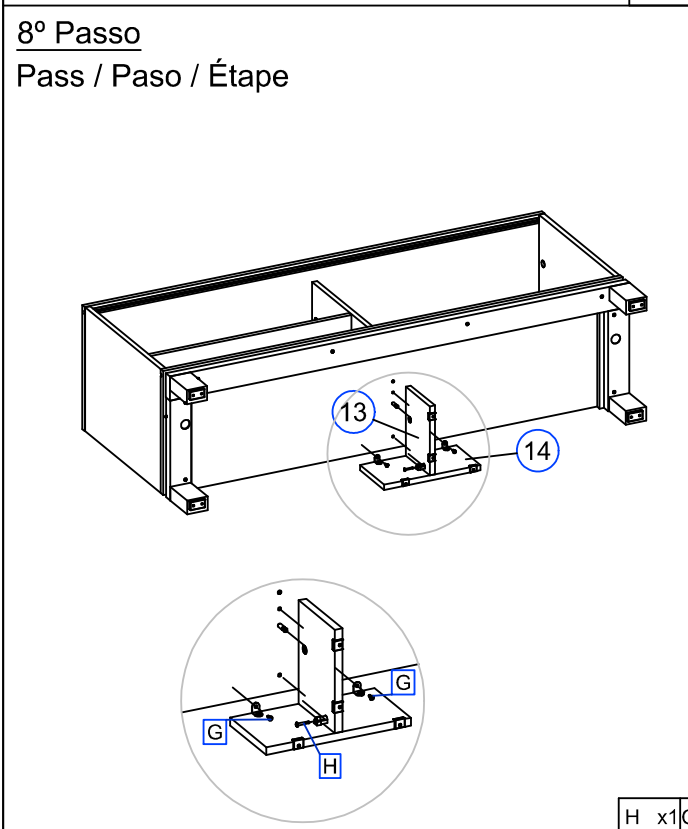

10º Passo

Pass / Paso / Étape

